### **Overview**


This is a 4 port USB hub for Raspberry Pi, provides more USB capability to your Pi, what's more, it features USB to UART converter for easy serial communication.

It can work with various versions of the Pi, and the size of the board is designed to perfectly fit the Zero / Zero W / Zero WH.

### **USB HUB HAT Features**

- 4 USB Ports, compatible with USB2.0/1.1
- Onboard USB to UART, with enable / disable switch, convenient for Raspberry Pi serial debugging and avoiding conflict
- · Onboard multi indicators, for monitoring the status of power, USB to UART, and each USB port

# What's on the USB HUB HAT

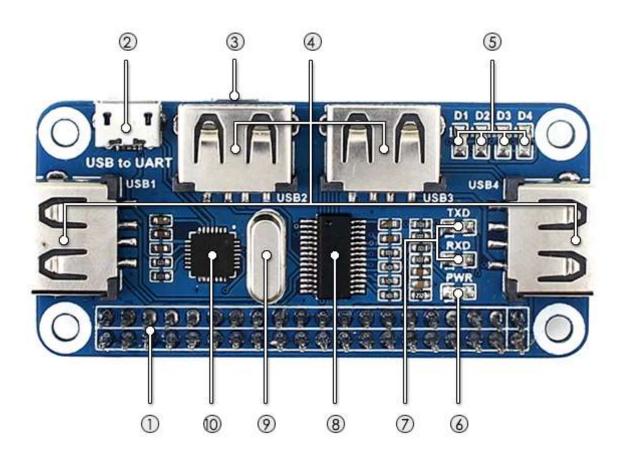

- 1. Raspberry Pi GPIO interface: for connecting Raspberry Pi
- 2. USB to UART: for controlling the Raspberry Pi via serial terminal
- 3. USB HUB interface (bottom):for connecting the HUB to the Raspberry Pi USB port

- Raspberry Pi Zero / Zero W / Zero WH: connected via Micro USB connector
- Raspberry Pi B+ / 2B / 3B / 3B+ /4B: connected via Micro USB cable
- 4. USB extended ports: USB1~USB4
- 5. USB port indicators: dedicated indicator for each USB port, D1~D4 for USB1~USB4 respectively
- 6. Power indicator
- 7. USB to UART indicator
- 8. FE1.1S: USB HUB chip
- 9. 12MHz crystal
- 10. CP2102: USB to UART converter

# **Specifications**

Operating voltage: 5V

• Dimension: 65mm × 30mm

Mounting hole size: 3.0mm

## **Dimensions**

