



Order

Now





OPA188

SBOS642C - MARCH 2013 - REVISED JANUARY 2020

OPA188 Precision, Low-Noise, Rail-to-Rail Output, 36-V, Zero-Drift Operational Amplifier

1 Features

- Low offset voltage: 25 μV (maximum)
- Zero drift: 0.03 μV/°C
- Low noise: 8.8 nV/ \sqrt{Hz}
 - 0.1-Hz to 10-Hz Noise: 0.25 μV_{PP}
- Excellent dc precision:
 - PSRR: 142 dB
 - CMRR: 146 dB
 - Open-loop gain: 136 dB
- Gain bandwidth: 2 MHz
- Quiescent current: 510 μA (Maximum)
- Wide supply range: ±2 V to ±18 V
- Rail-to-rail output
- Input includes negative rail
- RFI filtered inputs
- MicroSIZE packages

2 Applications

- Weight scale
- Analog input module
- Flow transmitter
- Battery test
- DC power supply, ac source, electronic load
- Data acquisition (DAQ)
- Semiconductor test

3 Description

The OPA188 operational amplifier uses TI's proprietary auto-zeroing techniques to provide low offset voltage ($25-\mu$ V maximum) and near zero-drift over time and temperature. This miniature, high-precision, low-quiescent current amplifier offers high input impedance and rail-to-rail output swing within 15 mV of the rails. The input common-mode range includes the negative rail. Either single or dual supplies can be used in the range from 4 V to 36 V (\pm 2 V to \pm 18 V).

The single version is available in the *Micro*SIZE SOT-23-5, MSOP-8, and SO-8 packages. All versions are specified for operation from -40° C to $+125^{\circ}$ C.

Device Information⁽¹⁾

PART NUMBER	PACKAGE	BODY SIZE (NOM)					
	SOIC (8)	4.90 mm × 3.91 mm					
OPA188	SOT-23 (5)	2.90 mm × 1.60 mm					
	VSSOP (8)	3.00 mm × 3.00 mm					

(1) For all available packages, see the package option addendum at the end of the data sheet.

Auto-Zero Technology Provides Ultra-Low Temperature Drift

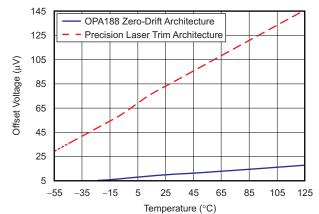


Table of Contents

1	Feat	tures 1
2	Арр	lications 1
3	Des	cription 1
4	Rev	ision History 2
5	Dev	ice Comparison Table 3
	5.1	Portfolio Comparison 3
6	Pin	Configuration and Functions 3
7	Spe	cifications 4
	7.1	Absolute Maximum Ratings 4
	7.2	ESD Ratings 4
	7.3	Recommended Operating Conditions 4
	7.4	Thermal Information 4
	7.5	Electrical Characteristics: High-Voltage Operation 5
	7.6	Electrical Characteristics: Low-Voltage Operation 6
	7.7	Typical Characteristics: Table of Graphs7
	7.8	Typical Characteristics 8
8	Deta	ailed Description 15
	8.1	Overview 15
	8.2	Functional Block Diagram 15

	8.3	Feature Description	16
	8.4	Device Functional Modes	19
9	App	lication and Implementation	20
	9.1	Application Information	20
	9.2	Typical Applications	20
10	Pow	er Supply Recommendations	25
11		out	
		Layout Guidelines	
		Layout Example	
12	Dev	ice and Documentation Support	26
	12.1	Device Support	26
	12.2	Documentation Support	26
	12.3	Receiving Notification of Documentation Updates	26
	12.4	Support Resources	26
	12.5	Trademarks	26
	12.6	Electrostatic Discharge Caution	26
	12.7	Glossary	26
13	Mec	hanical, Packaging, and Orderable	
	Infor	mation	27

4 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Cł	hanges from Revision B (September 2016) to Revision C	Page
•	Deleted automotive (Q1) device test conditions from plots in this commercial device data sheet	

Changes from Revision A (March 2013) to Revision B

•	Added Device Information, Device Comparison, ESD Ratings, and Recommended Operating Conditions tables, and Detailed Description, Applications and Implementation, Power Supply Recommendations, Layout, Device and Documentation Support, and Mechanical, Packaging, and Orderable Information sections	1
•	Deleted Package Information table; all information now available in the package option addendum at the end of the data sheet	3
•	Changed input bias current maximum value for over-temperature test condition in Electrical Characteristics	5
•	Changed input offset current maximum value for over-temperature test condition in Electrical Characteristics	5
•	Changed quiescent current values in Electrical Characteristics	5
•	Changed input bias current maximum value for over-temperature test condition in Electrical Characteristics	6
•	Changed input offset current maximum value for over-temperature test condition in Electrical Characteristics	6
•	Changed quiescent current maximum values in Electrical Characteristics	6

Changes from Original (March 2013) to Revision A

Submit Documentation Feedback

2

Changed document status to Production Data.....

1

Product Folder Links: OPA188



Page

Page




5 Device Comparison Table


5.1 Portfolio Comparison

			-		
VERSION	PRODUCT	OFFSET VOLTAGE (µV, maximum)	OFFSET VOLTAGE DRIFT (µV/°C, maximum)	BANDWIDTH (MHz)	INPUT VOLTAGE NOISE $(\mu V_{PP}, f = 0.1 \text{ Hz to } 10 \text{ Hz})$
	OPA188 (4 V to 36 V)	±25	±0.085	2	0.25
Qira el a	OPA333 (5 V)	±10	±0.05	0.35	1.1
Single	OPA378 (5 V)	±50	±0.25	0.9	0.4
	OPA735 (12 V)	±5	±0.05	1.6	2.5
	OPA2188 (4 V to 36 V)	±25	±0.085	2	0.25
D 1	OPA2333 (5 V)	±10	±0.05	0.35	1.1
Dual	OPA2378 (5 V)	±50	±0.25	0.9	0.4
	OPA2735 (12 V)	±5	±0.05	1.6	2.5
Quad	OPA4330 (5 V)	±50	±0.25	0.35	1.1

Table 1. Zero-Drift Amplifier Portfolio

6 Pin Configuration and Functions

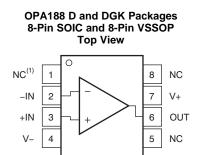

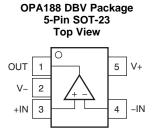

(1) NC = no connection.

Pin Functions

	PIN		I/O	DESCRIPTION	
NAME	D, DGK	DBV	1/0	DESCRIPTION	
+IN	3	3	I	Noninverting input	
–IN	2	4	I	Inverting input	
NC	1, 5, 8	—	—	No internal connection (can be left floating)	
OUT	6	1	0	Output	
V+	7	5		Positive (highest) power supply	
V–	4	2	—	Negative (lowest) power supply	

7 Specifications

7.1 Absolute Maximum Ratings

over operating free-air temperature range (unless otherwise noted)⁽¹⁾

			MIN	MAX	UNIT
	Supply	Split supply		±20	
Voltage	Supply	Single supply		40	V
vonage	Signal input pins ⁽²⁾		(V–) – 0.5	(V+) + 0.5	v
	Signal input pins 7	Differential		±0.7	
Current	Signal input pins ⁽²⁾	Signal input pins ⁽²⁾		±10	mA
Current	Output short-circuit ⁽³⁾	Output short-circuit ⁽³⁾		nuous	ША
Temperature	Operating ⁽⁴⁾ , T _A	Operating ⁽⁴⁾ , T _A		150	
	Junction, T _J	Junction, T _J		150	°C
	Storage, T _{stg}			150	

(1) Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device. These are stress ratings only, which do not imply functional operation of the device at these or any other conditions beyond those indicated under Recommended Operating Conditions. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

(2) Input terminals are diode-clamped to the power-supply rails. Input signals that can swing more than 0.5 V beyond the supply rails should be current-limited to 10 mA or less.

(3) Short-circuit to ground, V-, or V+.

(4) Provided device does not exceed maximum junction temperature (T_J) at any time.

7.2 ESD Ratings

				VALUE	UNIT
V		Flastrastatia disabarga	Human-body model (HBM), per ANSI/ESDA/JEDEC JS-001 ⁽¹⁾	±1500	V
v	(ESD)	Electrostatic discharge	Charged-device model (CDM), per JEDEC specification JESD22-C101 ⁽²⁾	±1000	v

(1) JEDEC document JEP155 states that 500-V HBM allows safe manufacturing with a standard ESD control process.

(2) JEDEC document JEP157 states that 250-V CDM allows safe manufacturing with a standard ESD control process.

7.3 Recommended Operating Conditions

over operating free-air temperature range (unless otherwise noted)

			MIN	NOM	MAX	UNIT
	Split supply	±2		±18	M	
Vs	Operating voltage range	Single supply	4		36	v
T _A	Specified temperature range		-40		125	°C

7.4 Thermal Information

			OPA188		
	THERMAL METRIC ⁽¹⁾	D (SO)	DBV (SOT23)	DGK (MSOP)	UNIT
		8 PINS	5 PINS	8 PINS	
R_{\thetaJA}	Junction-to-ambient thermal resistance	122.0	158.8	180.4	°C/W
R _{0JC(top)}	Junction-to-case (top) thermal resistance	68.5	60.7	67.9	°C/W
$R_{\theta JB}$	Junction-to-board thermal resistance	63.5	44.8	102.1	°C/W
ΨJT	Junction-to-top characterization parameter	13.7	1.6	10.4	°C/W
Ψјв	Junction-to-board characterization parameter	62.8	44.2	100.3	°C/W
R _{0JC(bot)}	Junction-to-case (bottom) thermal resistance	N/A	N/A	N/A	°C/W

(1) For more information about traditional and new thermal metrics, see the Semiconductor and IC Package Thermal Metrics application report, SPRA953.



7.5 Electrical Characteristics: High-Voltage Operation

at $T_A = +25^{\circ}$ C, $V_S = \pm 4$ V to ± 18 V ($V_S = 8$ V to 36 V), $R_L = 10$ k Ω connected to $V_S / 2^{(1)}$, and $V_{CM} = V_{OUT} = V_S / 2^{(1)}$ (unless otherwise noted)

	PARAMETER	र	CONDITIONS	MIN	TYP	MAX	UNIT
OFFSET V	/OLTAGE						
V _{OS}	Input offset voltage				±6	±25	μV
•OS	input onset voltage		$T_A = -40^{\circ}C$ to $+125^{\circ}C$		±0.03	±0.085	μV/°C
PSRR	Power-supply rejection		$V_{S} = 4 V \text{ to } 36 V, T_{A} = -40^{\circ}\text{C to } +125^{\circ}\text{C}$		±0.075	±0.3	μV/V
	Long-term stability ⁽²⁾				4		μV
INPUT BIA	AS CURRENT						
I _B	Input bias current		$V_{CM} = V_S / 2$		±160	±1400	рА
			$T_{A} = -40^{\circ}C \text{ to } +125^{\circ}C$			±18	nA
I _{OS}	Input offset current				±320	±2800	pA
			$T_A = -40^{\circ}C$ to $+125^{\circ}C$			±6	nA
NOISE							
e _n	Input voltage noise		f = 0.1 Hz to 10 Hz		250		nV _{PP}
			f = 0.1 Hz to 10 Hz		40		nVrms
	Input voltage noise o	-	f = 1 kHz		8.8		nV/√Hz fA/√Hz
	Input current noise d	lensity	f = 1 kHz		7		TA/VHZ
	Common-mode volta		$T_{A} = -40^{\circ}C \text{ to } +125^{\circ}C$	V–		(V+) – 1.5	V
V _{CM}	Common-mode voite	ige lange	$(V-) < V_{CM} < (V+) - 1.5 V$	120	134	(V+) = 1.3	dB
			$(V-) < V_{CM} < (V+) - 1.5 V$ $(V-) + 0.5 V < V_{CM} < (V+) - 1.5 V,$	120	134		uВ
CMRR	Common-mode rejection ratio $(V_{-}) + 0.5 V < V_{CM} < (V_{+}) - 1.5 V,$ 130 146 V _S = ±18 V $(V_{-}) + 0.5 V < V_{CM} < (V_{+}) - 1.5 V,$ 120 126		$V_{S} = \pm 18 V$	130	146		dB
				dB			
INPUT IM	PEDANCE						
Z _{ID}	Differential				100 6		$M\Omega \parallel pF$
Z _{IC}	Common-mode				6 9.5		$10^{12} \Omega \parallel pF$
OPEN-LO	OP GAIN						
			$(V-) + 0.5 V < V_O < (V+) - 0.5 V$	130	136		dB
A _{OL}	Open-loop voltage g	ain	$(V-) + 0.5 V < V_O < (V+) - 0.5 V,$ $T_A = -40^{\circ}C$ to +125°C	120	126		dB
FREQUEN	ICY RESPONSE		· · · · ·			,	
GBW	Gain-bandwidth proc	luct			2		MHz
SR	Slew rate		G = +1		0.8		V/µs
	Cattling time	0.1%	V _S = ±18 V, G = 1, 10-V step		20		μS
t _S	Settling time	0.01%	$V_{S} = \pm 18 V, G = 1, 10-V step$		27		μS
t _{OR}	Overload recovery til	me	$V_{IN} \times G = V_S$		1		μS
THD+N	Total harmonic disto	rtion + noise	1 kHz, G = 1, V _{OUT} = 1 Vrms		0.0001%		
OUTPUT							
			No load		6	15	mV
	Voltage output swing	g from rail	$R_L = 10 \text{ k}\Omega$		220	250	mV
			$T_A = -40^{\circ}C$ to $+125^{\circ}C$		310	350	mV
1	Short-circuit current		Sinking		-18		mA
I _{SC}	Short-circuit current		Sourcing		16		mA
R _O	Open-loop output res	sistance	$f = 1 \text{ MHz}, I_0 = 0$		120		Ω
C _{LOAD}	Capacitive load drive				1		nF
POWER S	SUPPLY						
	Quipagent surrest /-	or omplificr)	$V_{S} = \pm 4$ V to $V_{S} = \pm 18$ V		450	510	μA
Ι _Q	Quiescent current (p	er amplitter)	$I_0 = 0 \text{ mA}, T_A = -40^{\circ}\text{C to } +125^{\circ}\text{C}$			600	μA

(1) $V_S / 2 = midsupply.$

(2) 1000-hour life test at 125°C demonstrated randomly distributed variation in the range of measurement limits—approximately 4 µV.

7.6 Electrical Characteristics: Low-Voltage Operation

at $T_A = 25^{\circ}$ C, $V_S = \pm 2$ V to < ± 4 V ($V_S = 4$ V to < 8 V), $R_L = 10$ k Ω connected to $V_S / 2^{(1)}$, and $V_{CM} = V_{OUT} = V_S / 2^{(1)}$ (unless otherwise noted)

	PARAMETER	CONDITIONS	MIN	TYP	MAX	UNIT
OFFSET V	OLTAGE					
V _{os}	Input offset voltage			±6	±25	μV
-03		$T_A = -40^{\circ}C \text{ to } +125^{\circ}C$		±0.03	±0.085	μV/°C
PSRR	Power-supply rejection ratio	$V_S = 4 V$ to 36 V, $T_A = -40^{\circ}$ C to +125°C		0.075	0.3	μV/V
	Long-term stability ⁽²⁾			4		μV
NPUT BIA	AS CURRENT					
I _B	Input bias current			±160	±1400	pА
В		$T_A = -40^{\circ}C \text{ to } +125^{\circ}C$			±18	nA
los	Input offset current			±320	±2800	pА
ios		$T_A = -40^{\circ}C$ to $+125^{\circ}C$			±6	nA
NOISE					1	
ə _n	Input voltage noise	f = 0.1 Hz to 10 Hz		250		nV _{PP}
-n	input voltage holse	f = 0.1 Hz to 10 Hz		40		nVrms
	Input voltage noise density	f = 1 kHz		8.8		nV/√Hz
'n	Input current noise density	f = 1 kHz		7		fA/√Hz
INPUT VO	LTAGE RANGE					
V _{CM}	Common-mode voltage range	$T_A = -40^{\circ}C \text{ to } +125^{\circ}C$	V–		(V+) – 1.5	V
		$(V-) < V_{CM} < (V+) - 1.5 V$	106	114		dB
CMRR Commo	Common-mode rejection ratio	$(V-) + 0.5 V < V_{CM} < (V+) - 1.5 V, V_{S} = \pm 2 V$	114	120		dB
		$(V-) + 0.5 V < V_{CM} < (V+) - 1.5 V,$ $V_{S} = \pm 2 V, T_{A} = -40^{\circ}C \text{ to } +125^{\circ}C$	110	120		dB
	PEDANCE					
Z _{ID}	Differential			100 6		MΩ pF
Z _{IC}	Common-mode			6 9.5		$10^{12} \Omega \parallel pl$
OPEN-LO	OP GAIN				1	
		$(V-) + 0.5 V < V_O < (V+) - 0.5 V, R_L = 5 k\Omega$	110	120		dB
A _{OL}	Open-loop voltage gain	(V–) + 0.5 V < V _O < (V+) – 0.5 V	120	130		dB
		$(V-) + 0.5 V < V_0 < (V+) - 0.5 V,$ $T_A = -40^{\circ}C \text{ to } +125^{\circ}C$	110	120		dB
FREQUEN	ICY RESPONSE					
GBW	Gain-bandwidth product			2		MHz
SR	Slew rate	G = +1		0.8		V/µs
t _{or}	Overload recovery time	$V_{IN} \times G = V_S$		1		μS
THD+N	Total harmonic distortion + noise	1 kHz, G = 1, V _{OUT} = 1 Vrms		0.0001%		
OUTPUT						
		No load		6	15	mV
	Voltage output swing from rail	$R_L = 10 \ k\Omega$		220	250	mV
		$T_{A} = -40^{\circ}C \text{ to } +125^{\circ}C$		310	350	mV
		Sinking		-18		mA
SC	Short-circuit current	Sourcing		16		mA
R _o	Open-loop output resistance	$f = 1 \text{ MHz}, I_0 = 0$		120		Ω
C _{LOAD}	Capacitive load drive			1		nF
POWER S	UPPLY				1	
		$V_{S} = \pm 2 V$ to $V_{S} = \pm 4 V$		425	485	μA
lq	Quiescent current (per amplifier)					

V_S / 2 = midsupply.
 1000-hour life test at 125°C demonstrated randomly distributed variation in the range of measurement limits—approximately 4 μV.



7.7 Typical Characteristics: Table of Graphs

7.7.1 Table of Graphs

Offset Voltage Production DistributionFigure 1Offset Voltage Drift DistributionFigure 2Offset Voltage vs Common-Mode VoltageFigure 3Offset Voltage vs Common-Mode VoltageFigure 4Offset Voltage vs Common-Mode VoltageFigure 6Open-Loop Gain and Phase vs FrequencyFigure 8Is and Log vs Common-Mode VoltageFigure 9Input Bias Current vs TemperatureFigure 9Input Bias Current vs TemperatureFigure 9Output Voltage Swing vs Output Current (Maximum Supply)Figure 11CMRR and PSRR vs Frequency (Referred-to-Input)Figure 12CMRR vs TemperatureFigure 13O.1-Hz to 10-Hz NoiseFigure 14PSR vs TemperatureFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N Ratio vs FrequencyFigure 18THD+N Natio vs FrequencyFigure 20Quiescent Current vs Supply VoltageFigure 21Quescent Current vs Supply VoltageFigure 22Open-Loop Gain vs TemperatureFigure 22Open-Loop Gain vs TemperatureFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24No Phase ReversalFigure 23Small-Signal Step ResponseFigure 33Large-Signal Step ResponseFigure 32Large-Signal Step ResponseFigure 33Large-Signal Step ResponseFigure 36Kingure 36Figure 33Large-Signal Step ResponseFigure 36Kingure 36Figure 36Kingure 37Figure 36<	DESCRIPTION	FIGURE
Offset Voltage vs Temperature Figure 3 Offset Voltage vs Common-Mode Voltage Figure 4, Figure 5 Offset Voltage vs Power Supply Figure 6 Open-Loop Gain and Phase vs Frequency Figure 7 Closed-Loop Gain vs Frequency Figure 8 I _a and I _{os} vs Common-Mode Voltage Figure 9 Input Bias Current vs Temperature Figure 10 Output Voltage Swing vs Output Current (Maximum Supply) Figure 12 CMRR and PSRR vs Frequency (Referred-to-Input) Figure 13, Figure 14 PSRR vs Temperature Figure 15 O.1-Hz to 10-Hz Noise Figure 16 Input Bias Spectral Density vs Frequency Figure 17 THD+N Ratio vs Frequency Figure 18 THD+N vs Output Amplitude Figure 20 Quiescent Current vs Supply Voltage Figure 21 Open-Loop Output Impedance vs Frequency Figure 22 Open-Loop Output Impedance vs Frequency Figure 23 Small-Signal Overshoot vs Capacitive Load (100-mV Output Step) Figure 24 No Phase Reversal Figure 23 Positive Overload Recovery Figure 30 Large-Signal Step Response (100 mV) Figure 33 Large-Signal Step Response (100 mV) Figure 33 Large-Signal Stetting Time (10-V Negative Step) Figure 33 Large-Signal Stetting	Offset Voltage Production Distribution	Figure 1
Offset Voltage vs Common-Mode Voltage Figure 4, Figure 5 Offset Voltage vs Power Supply Figure 6 Open-Loop Gain and Phase vs Frequency Figure 9 In Iops Vs Common-Mode Voltage Figure 9 Input Bias Current vs Temperature Figure 10 Output Voltage Swing vs Output Current (Maximum Supply) Figure 11 CMRR and PSRR vs Frequency (Referred-to-Input) Figure 12 CMRR vs Temperature Figure 13 Ol-Hz to 10-Hz Noise Figure 16 Input Voltage Noise Spectral Density vs Frequency Figure 17 THD+N Ratio vs Frequency Figure 20 Quiescent Current vs Temperature Figure 21 Open-Loop Gain vs Temperature Figure 21 Open-Loop Gain vs Temperature Figure 21 Open-Loop Cain vs Temperature Figure 21 Open-Loop Gain vs Temperature Figure 21 Open-Loop Gain vs Temperature Figure 22 Open-Loop Gain vs Temperature Figure 23 Small-Signal Overshoot vs Capacitive Load (100-mV Output Step) Figure 24, Figure 25 No Phase Reversal Figure 23 Small-Signal Step Response Figure 31 Large-Signal Step Response Figure 32 Small-Signal Step Response Figure 32 Large-Signal Stetting Time (10-V Negative Step) Figure 33 <td>Offset Voltage Drift Distribution</td> <td>Figure 2</td>	Offset Voltage Drift Distribution	Figure 2
Offset Voltage vs Power Supply Figure 6 Open-Loop Gain and Phase vs Frequency Figure 7 Closed-Loop Gain vs Frequency Figure 8 I _B and I _{OS} vs Common-Mode Voltage Figure 9 Iput Bias Current vs Temperature Figure 10 Output Voltage Swing vs Output Current (Maximum Supply) Figure 11 CMRR and PSRR vs Frequency (Referred-to-Input) Figure 12 CMRR vs Temperature Figure 13, Figure 14 PSR vs Temperature Figure 15 0.1-Hz to 10-Hz Noise Figure 16 Input Voltage Noise Spectral Density vs Frequency Figure 18 THD+N Ratio vs Frequency Figure 20 Quiescent Current vs Supply Voltage Figure 21 Open-Loop Gain vs Temperature Figure 21 Open-Loop Gain vs Temperature Figure 23 Small-Signal Overshoot vs Capacitive Load (100-mV Output Step) Figure 24 Positive Overload Recovery Figure 26 Positive Overload Recovery Figure 23 Small-Signal Step Response Figure 31 Large-Signal Stetling Time (10-V Negative Step) Figure 33 Large-Signal Stetling Time (10-V Negative Step) Figure 34 Short-Circuit Current vs Temperature Figure 35	Offset Voltage vs Temperature	Figure 3
Open-Loop Gain and Phase vs FrequencyFigure 7Closed-Loop Gain vs FrequencyFigure 8Ig and I _{OS} vs Common-Mode VoltageFigure 9Input Bias Current vs TemperatureFigure 10Output Voltage Swing vs Output Current (Maximum Supply)Figure 11CMRR and PSRR vs Frequency (Referred-to-Input)Figure 12CMRR vs TemperatureFigure 13, Figure 14PSRR vs TemperatureFigure 150.1-Hz to 10-Hz NoiseFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N vs Output AmplitudeFigure 19Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Gain vs TemperatureFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 31Large-Signal Stetling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 35	Offset Voltage vs Common-Mode Voltage	Figure 4, Figure 5
Closed-Loop Gain vs FrequencyFigure 8Is and I _{QS} vs Common-Mode VoltageFigure 9Input Bias Current vs TemperatureFigure 10Output Voltage Swing vs Output Current (Maximum Supply)Figure 11CMRR and PSRR vs Frequency (Referred-to-Input)Figure 12CMR vs TemperatureFigure 13, Figure 14PSR vs TemperatureFigure 150.1-Hz to 10-Hz NoiseFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 18THD+N Ratio vs FrequencyFigure 19Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs Supply VoltageFigure 21Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 27Negative Overload RecoveryFigure 27Negative Overload RecoveryFigure 33Large-Signal Step Response (100 mV)Figure 33Large-Signal Step Response (100 mV)Figure 34Large-Signal Step ResponseFigure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 35	Offset Voltage vs Power Supply	Figure 6
Is and Ios vs Common-Mode VoltageFigure 9Input Bias Current vs TemperatureFigure 10Output Voltage Swing vs Output Current (Maximum Supply)Figure 11CMRR and PSRR vs Frequency (Referred-to-Input)Figure 12CMRR vs TemperatureFigure 13, Figure 14PSRr vs TemperatureFigure 150.1-Hz to 10-Hz NoiseFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N Ratio vs FrequencyFigure 18THD+N vs Output AmplitudeFigure 20Quiescent Current vs Supply VoltageFigure 21Open-Loop Gain vs TemperatureFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step Response (100 mV)Figure 33Large-Signal Step ResponseFigure 33Large-Signal Step Response (100 mV)Figure 33Large-Signal Step ResponseFigure 33Large-Signal Step ResponseFigure 33Large-Signal Step ResponseFigure 35Mort-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 35	Open-Loop Gain and Phase vs Frequency	Figure 7
Input Bias Current vs TemperatureFigure 10Output Voltage Swing vs Output Current (Maximum Supply)Figure 11CMRR and PSRR vs Frequency (Referred-to-Input)Figure 12CMRR vs TemperatureFigure 13, Figure 14PSRR vs TemperatureFigure 150.1-Hz to 10-Hz NoiseFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N Ratio vs FrequencyFigure 18THD+N Ratio vs FrequencyFigure 20Quiescent Current vs Supply VoltageFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 26Positive Overload RecoveryFigure 28Small-Signal Step ResponseFigure 28Small-Signal Step ResponseFigure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Step ResponseFigure 33Large-Signal Step ResponseFigure 33Large-Signal Stepting Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 35	Closed-Loop Gain vs Frequency	Figure 8
Output Voltage Swing vs Output Current (Maximum Supply)Figure 11CMRR and PSRR vs Frequency (Referred-to-Input)Figure 12CMRR vs TemperatureFigure 13, Figure 14PSRR vs TemperatureFigure 150.1-Hz to 10-Hz NoiseFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N Ratio vs FrequencyFigure 18THD+N vs Output AmplitudeFigure 19Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step ResponseFigure 30Large-Signal Step ResponseFigure 33Large-Signal Stept Negative Step)Figure 34Short-Circuit Curr	I _B and I _{OS} vs Common-Mode Voltage	Figure 9
CMRR and PSRR vs Frequency (Referred-to-Input)Figure 12CMRR vs TemperatureFigure 13, Figure 14PSR vs TemperatureFigure 150.1-Hz to 10-Hz NoiseFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N Ratio vs FrequencyFigure 18THD+N vs Output AmplitudeFigure 20Quiescent Current vs Supply VoltageFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step ResponseFigure 33Large-Signal Step ResponseFigure 33Large-Signal Stept ResponseFigure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Input Bias Current vs Temperature	Figure 10
CMRR vs TemperatureFigure 13, Figure 14PSR vs TemperatureFigure 150.1-Hz to 10-Hz NoiseFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N Ratio vs FrequencyFigure 18THD+N vs Output AmplitudeFigure 19Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 27Negative Overload RecoveryFigure 28Small-Signal Step ResponseFigure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Stetling Time (10-V Positive Step)Figure 33Large-Signal Stetling Time (10-V Negative Step)Figure 35Maximum Output Voltage vs FrequencyFigure 35	Output Voltage Swing vs Output Current (Maximum Supply)	Figure 11
PSRR vs TemperatureFigure 150.1-Hz to 10-Hz NoiseFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N Ratio vs FrequencyFigure 18THD+N vs Output AmplitudeFigure 19Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 32Large-Signal Stettling Time (10-V Positive Step)Figure 33Large-Signal Stettling Time (10-V Negative Step)Figure 33Large-Signal Stettling Time (10-V Negative Step)Figure 35Maximum Output Voltage vs FrequencyFigure 35	CMRR and PSRR vs Frequency (Referred-to-Input)	Figure 12
0.1-Hz to 10-Hz NoiseFigure 16Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N Ratio vs FrequencyFigure 18THD+N vs Output AmplitudeFigure 19Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Stept ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 35Maximum Output Voltage vs FrequencyFigure 36	CMRR vs Temperature	Figure 13, Figure 14
Input Voltage Noise Spectral Density vs FrequencyFigure 17THD+N Ratio vs FrequencyFigure 18THD+N vs Output AmplitudeFigure 19Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 29, Figure 30Large-Signal Step ResponseFigure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	PSRR vs Temperature	Figure 15
THD+N Ratio vs FrequencyFigure 18THD+N vs Output AmplitudeFigure 19Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 26Positive Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	0.1-Hz to 10-Hz Noise	Figure 16
THD+N vs Output AmplitudeFigure 19Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Input Voltage Noise Spectral Density vs Frequency	Figure 17
Quiescent Current vs Supply VoltageFigure 20Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	THD+N Ratio vs Frequency	Figure 18
Quiescent Current vs TemperatureFigure 21Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	THD+N vs Output Amplitude	Figure 19
Open-Loop Gain vs TemperatureFigure 22Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Quiescent Current vs Supply Voltage	Figure 20
Open-Loop Output Impedance vs FrequencyFigure 23Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Quiescent Current vs Temperature	Figure 21
Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)Figure 24, Figure 25No Phase ReversalFigure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Open-Loop Gain vs Temperature	Figure 22
No Phase ReversalFigure 26Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Open-Loop Output Impedance vs Frequency	Figure 23
Positive Overload RecoveryFigure 27Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Small-Signal Overshoot vs Capacitive Load (100-mV Output Step)	Figure 24, Figure 25
Negative Overload RecoveryFigure 28Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	No Phase Reversal	Figure 26
Small-Signal Step Response (100 mV)Figure 29, Figure 30Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Positive Overload Recovery	Figure 27
Large-Signal Step ResponseFigure 31, Figure 32Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Negative Overload Recovery	Figure 28
Large-Signal Settling Time (10-V Positive Step)Figure 33Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Small-Signal Step Response (100 mV)	Figure 29, Figure 30
Large-Signal Settling Time (10-V Negative Step)Figure 34Short-Circuit Current vs TemperatureFigure 35Maximum Output Voltage vs FrequencyFigure 36	Large-Signal Step Response	Figure 31, Figure 32
Short-Circuit Current vs Temperature Figure 35 Maximum Output Voltage vs Frequency Figure 36	Large-Signal Settling Time (10-V Positive Step)	Figure 33
Maximum Output Voltage vs Frequency Figure 36	Large-Signal Settling Time (10-V Negative Step)	Figure 34
	Short-Circuit Current vs Temperature	Figure 35
EMIRR IN+ vs Frequency Figure 37	Maximum Output Voltage vs Frequency	Figure 36
	EMIRR IN+ vs Frequency	Figure 37


Table 2. Typical Characteristic Graphs

OPA188 SBOS642C – MARCH 2013 – REVISED JANUARY 2020 TEXAS INSTRUMENTS

www.ti.com


7.8 Typical Characteristics

at V_S = ±18 V, V_{CM} = V_S / 2, R_{LOAD} = 10 k Ω connected to V_S / 2, and C_L = 100 pF (unless otherwise noted)

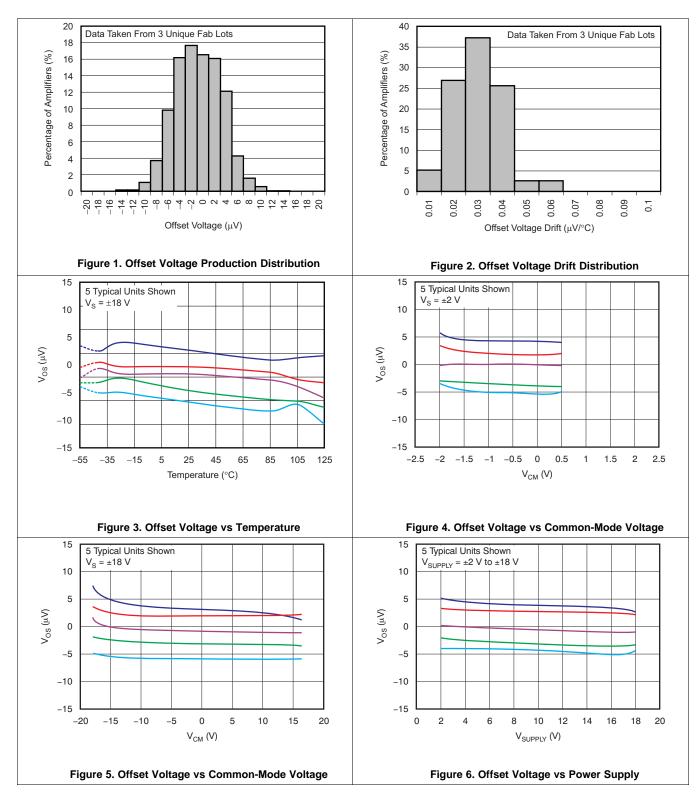




Typical Characteristics (continued)

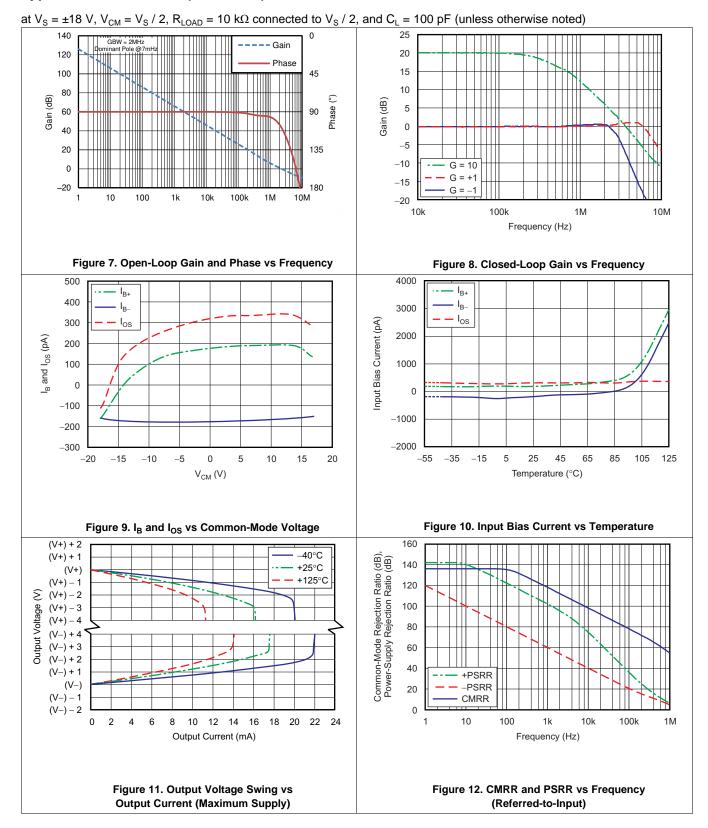




Typical Characteristics (continued)

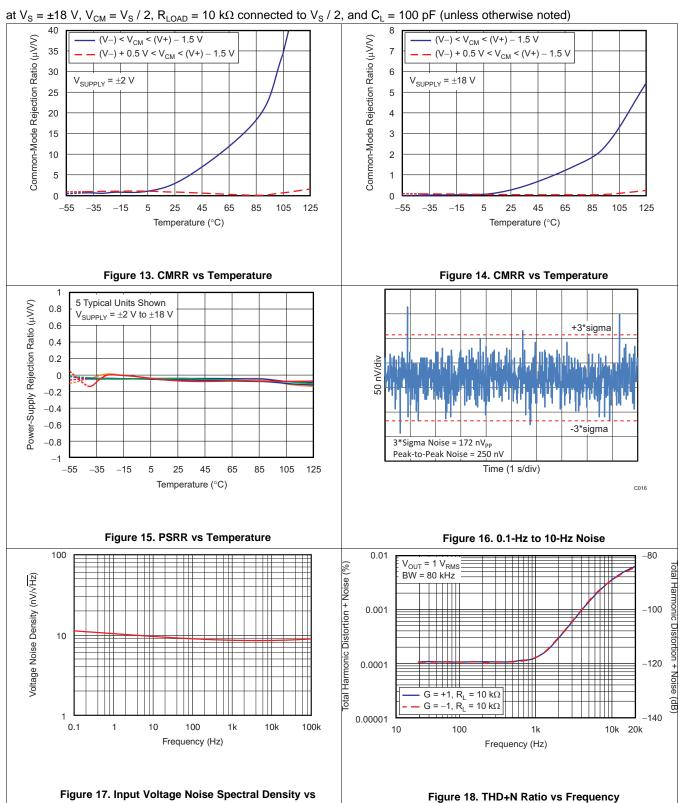




Typical Characteristics (continued)

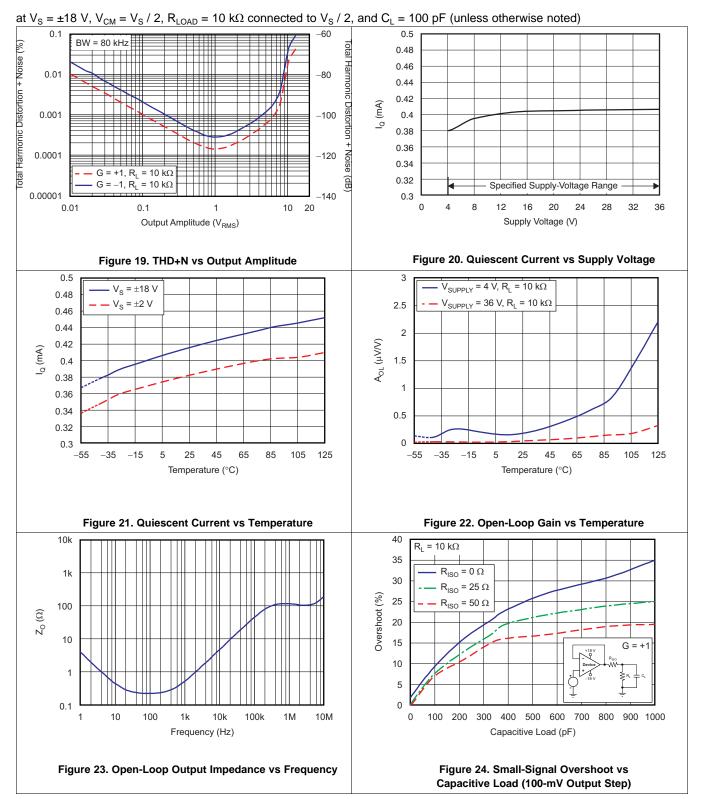




Typical Characteristics (continued)

at V_S = ±18 V, V_{CM} = V_S / 2, R_{LOAD} = 10 k Ω connected to V_S / 2, and C_L = 100 pF (unless otherwise noted)

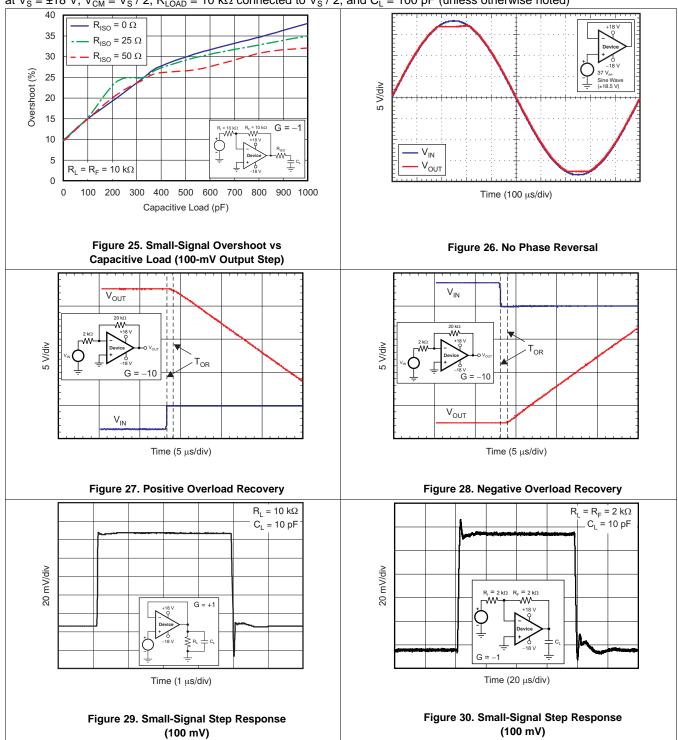



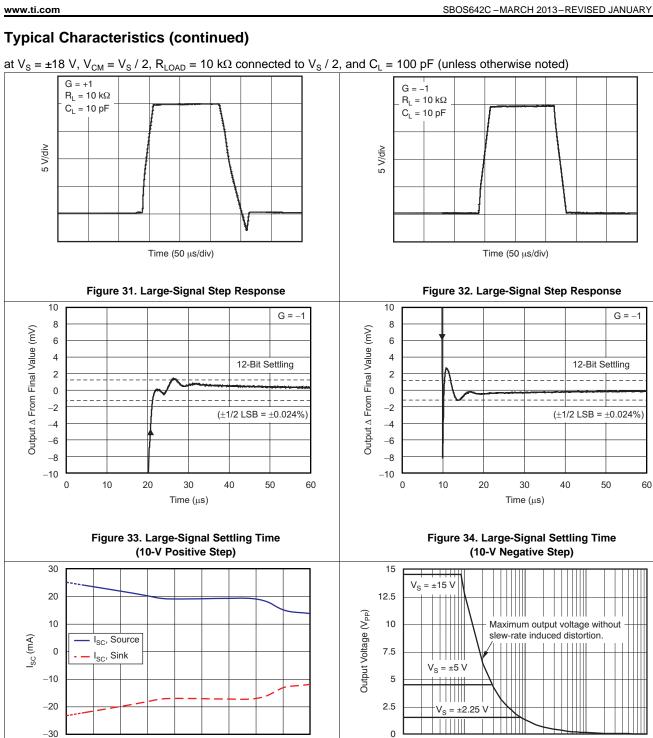

-35

-15

5

25

Temperature (°C)

Figure 35. Short-Circuit Current vs Temperature

45 65

85

105 125

-55

1M

10M

100k

Frequency (Hz)

Figure 36. Maximum Output Voltage vs Frequency


1k

10k



Typical Characteristics (continued)

at V_S = ±18 V, V_{CM} = V_S / 2, R_{LOAD} = 10 k Ω connected to V_S / 2, and C_L = 100 pF (unless otherwise noted)

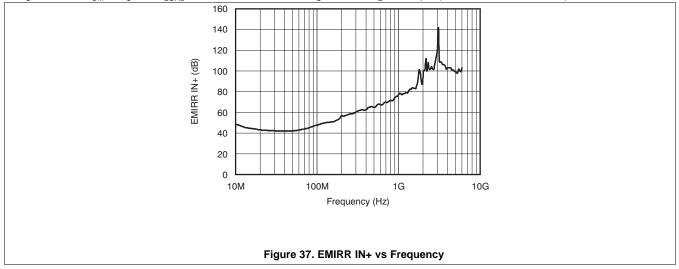



8 Detailed Description

The OPA188 operational amplifier combines precision offset and drift with excellent overall performance, making this device an excellent choice for many precision applications. The precision offset drift of only 0.085 μ V/°C provides stability over the entire temperature range. In addition, this device offers excellent overall performance with high CMRR, PSRR, and A_{OL}. As with all amplifiers, applications with noisy or high-impedance power supplies require decoupling capacitors close to the device pins. In most cases, 0.1- μ F capacitors are adequate.

The OPA188 device is part of a family of zero-drift, low-power, rail-to-rail output operational amplifiers. These devices operate from 4 V to 36 V, are unity-gain stable, and are designed for a wide range of general-purpose applications. The zero-drift architecture provides ultra-low input offset voltage and near-zero input offset voltage drift over temperature and time. This choice of architecture also offers outstanding ac performance, such as ultra-low broadband noise and zero flicker noise.

8.2 Functional Block Diagram

Figure 38 shows a representation of the proprietary OPA188 architecture. Table 3 lists the active and passive component counts for this device. The component count allows for accurate reliability calculations.

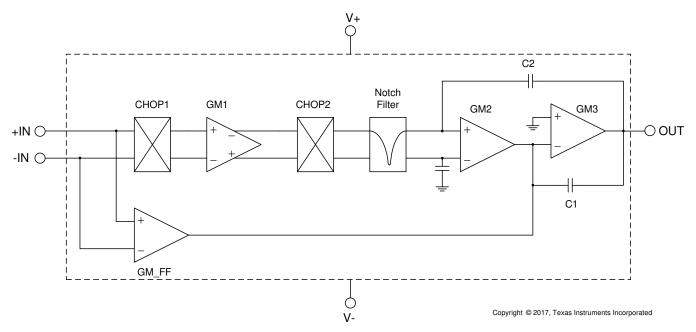


Figure 38. Functional Block Diagram

Table 5. Component Count								
COMPONENT	COUNT							
Transistors	636							
Diodes	5							
Resistors	41							
Capacitors	72							

Table 3. Component Cou	unt
------------------------	-----



8.3 Feature Description

The OPA188 is unity-gain stable and free from unexpected output phase reversal. This device uses a proprietary, periodic zero-drift technique to provide low input offset voltage and very low input offset voltage drift over temperature. For lowest offset voltage and precision performance, optimize circuit layout and mechanical conditions. Avoid temperature gradients that create thermoelectric (Seebeck) effects in the thermocouple junctions formed from connecting dissimilar conductors. Cancel these thermally-generated potentials by ensuring the potentials are equal on both input pins. Other layout and design considerations include:

- Use low thermoelectric-coefficient conditions (avoid dissimilar metals).
- Thermally isolate components from power supplies or other heat sources.
- Shield the operational amplifier and input circuitry from air currents, such as cooling fans.

Follow these guidelines to reduce the likelihood of junctions being at different temperatures, which may cause thermoelectric voltages of 0.1 μ V/°C or higher, depending on the materials used.

8.3.1 Operating Characteristics

The OPA188 is specified for operation from 4 V to 36 V (\pm 2 V to \pm 18 V). Many specifications apply from –40°C to +125°C. Parameters that can exhibit significant variance with regard to operating voltage or temperature are presented in *Typical Characteristics*.

8.3.2 Phase-Reversal Protection

The OPA188 has an internal phase-reversal protection. Many op amps exhibit a phase reversal when the input is driven beyond the linear common-mode range. This condition is most often encountered in noninverting circuits when the input is driven beyond the specified common-mode voltage range, causing the output to reverse into the opposite rail. The OPA188 input prevents phase reversal with excessive common-mode voltage. Instead, the output limits into the appropriate rail; Figure 39 shows this performance.

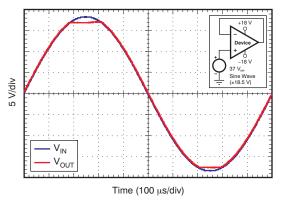


Figure 39. No Phase Reversal

8.3.3 Input Bias Current Clock Feedthrough

Zero-drift amplifiers (such as the OPA188) use switching on the inputs to correct for the intrinsic offset and drift of the amplifier. Charge injection from the integrated switches on the inputs can introduce very short transients in the input bias current of the amplifier. The extremely short duration of these pulses prevents the device from being amplified. However, the devices may be coupled to the output of the amplifier through the feedback network. The most effective method to prevent transients in the input bias current from producing additional noise at the amplifier output is to use a low-pass filter such as an RC network.

8.3.4 Internal Offset Correction


The OPA188 op amp uses an auto-calibration technique with a time-continuous 750-kHz op amp in the signal path. This amplifier is zero-corrected every 3 μ s using a proprietary technique. Upon power up, the amplifier requires approximately 100 μ s to achieve the specified V_{OS} accuracy. This design has no aliasing or flicker noise.



Feature Description (continued)

8.3.5 EMI Rejection

The OPA188 uses integrated electromagnetic interference (EMI) filtering to reduce the effects of EMI interference from sources such as wireless communications and densely-populated boards with a mix of analog signal chain and digital components. EMI immunity can be improved with circuit design techniques; the benefits from these design improvements. Texas Instruments[™] has developed the ability to accurately measure and quantify the immunity of an operational amplifier over a broad frequency spectrum extending from 10 MHz to 6 GHz. Figure 40 shows the results of this testing on the OPA188 . Table 4 lists the EMIRR IN+ values for theOPA188 at particular frequencies commonly encountered in real-world applications. Applications listed in Table 4 may be centered on or operated near the particular frequency shown. Detailed information can also be found in *EMI Rejection Ratio of Operational Amplifiers*, available for download from www.ti.com.

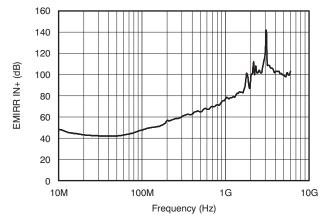




FREQUENCY	APPLICATION OR ALLOCATION	EMIRR IN+				
400 MHz	Mobile radio, mobile satellite, space operation, weather, radar, ultra-high frequency (UHF) applications	62.2 dB				
900 MHz	Global system for mobile communications (GSM) applications, radio communication, navigation, GPS (to 1.6 GHz), GSM, aeronautical mobile, UHF applications					
1.8 GHz	GSM applications, mobile personal communications, broadband, satellite, L-band (1 GHz to 2 GHz)	100.7 dB				
2.4 GHz	2.4 GHz 802.11b, 802.11g, 802.11n, <i>Bluetooth</i> [®] , mobile personal communications, industrial, scientific and medical (ISM) radio band, amateur radio and satellite, S- band (2 GHz to 4 GHz)					
3.6 GHz	Radiolocation, aero communication and navigation, satellite, mobile, S-band	104.8 dB				
5 GHz	802.11a, 802.11n, aero communication and navigation, mobile communication, space and satellite operation, C-band (4 GHz to 8 GHz)	100.3 dB				

8.3.6 Capacitive Load and Stability

The device dynamic characteristics are optimized for a range of common operating conditions. The combination of low closed-loop gain and high capacitive loads decreases the amplifier phase margin and can lead to gain peaking or oscillations. As a result, larger capacitive loads must be isolated from the output. The simplest way to achieve this isolation is to add a small resistor (for example, R_{OUT} equal to 50 Ω) in series with the output. Figure 41 and Figure 42 show graphs of small-signal overshoot versus capacitive load for several values of R_{OUT} . For details of analysis techniques and application circuits, see *Feedback Plots Define Op Amp AC Performance*, available for download from www.ti.com.



OPA188 SBOS642C – MARCH 2013–REVISED JANUARY 2020

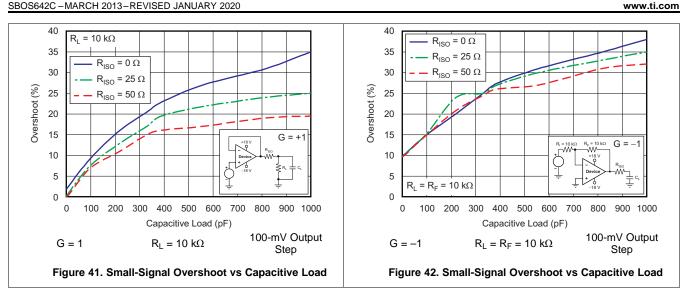

8.3.7 Electrical Overstress

Designers often ask questions about the capability of an operational amplifier to withstand electrical overstress. These questions tend to focus on the device inputs, but may involve the supply voltage pins or the output pin. Each of these different pin functions have electrical stress limits determined by the voltage breakdown characteristics of the particular semiconductor fabrication process and specific circuits connected to the pin. Additionally, internal electrostatic discharge (ESD) protection is built into these circuits to protect them from accidental ESD events both before and during product assembly.

Having a good understanding of this basic ESD circuitry and its relevance to an electrical overstress event is helpful. See Figure 43 for an illustration of the ESD circuits contained in the OPA188 (indicated by the dashed line area). The ESD protection circuitry involves several current-steering diodes connected from the input and output pins and routed back to the internal power-supply lines, where the diodes meet at an internal absorption device of the operational amplifier. This protection circuitry is intended to remain inactive during normal circuit operation.

An ESD event produces a short-duration, high-voltage pulse that is transformed into a short-duration, highcurrent pulse while discharging through a semiconductor device. The ESD protection circuits are designed to provide a current path around the operational amplifier core to prevent damage. The energy absorbed by the protection circuitry is dissipated as heat.

When an ESD voltage develops across two or more amplifier device pins, current flows through one or more steering diodes. Depending on the path that the current takes, the absorption device may activate. The absorption device has a trigger, or threshold voltage, that is above the normal operating voltage of the OPA188 but below the device breakdown voltage level. When this threshold is exceeded, the absorption device quickly activates and clamps the voltage across the supply rails to a safe level.

When the operational amplifier connects into a circuit (such as Figure 43 shows), the ESD protection components are intended to remain inactive and do not become involved in the operation of the application circuit. However, circumstances may arise where an applied voltage exceeds the operating voltage range of a given pin. If this condition occurs, there is a risk that some internal ESD protection circuits may be biased on and conduct current. Any such current flow occurs through steering-diode paths and rarely involves the absorption device.


Figure 43 shows a specific example where the input voltage, V_{IN} , exceeds the positive supply voltage (+V_S) by 500 mV or more. Much of what happens in the circuit depends on the supply characteristics. If +V_S can sink the current, one of the upper-input steering diodes conducts and directs current to +V_S. Excessively high current levels can flow with increasingly higher V_{IN} . As a result, the data sheet specifications recommend that applications limit the input current to 10 mA.

If the supply is not capable of sinking the current, V_{IN} may begin sourcing current to the operational amplifier, and then take over as the source of positive supply voltage. The danger in this case is that the voltage can rise to levels that exceed the absolute maximum ratings of the operational amplifier.



Another common question involves what happens to the amplifier if an input signal is applied to the input while the power supplies $(+V_S \text{ or } -V_S)$ are at 0 V. Again, this question depends on the supply characteristic while at 0 V, or at a level below the input signal amplitude. If the supplies appear as high impedance, then the operational amplifier supply current may be supplied by the input source through the current-steering diodes. This state is not a normal bias condition; the amplifier will not operate normally. If the supplies are low impedance, then the current through the steering diodes can become quite high. The current level depends on the ability of the input source to deliver current, and any resistance in the input path.

If there is any uncertainty about the ability of the supply to absorb this current, external zener diodes may be added to the supply pins, as shown in Figure 43. The zener voltage must be selected such that the diode does not turn on during normal operation. However, the zener voltage must be low enough so that the zener diode conducts if the supply pin begins to rise above the safe operating supply voltage level.

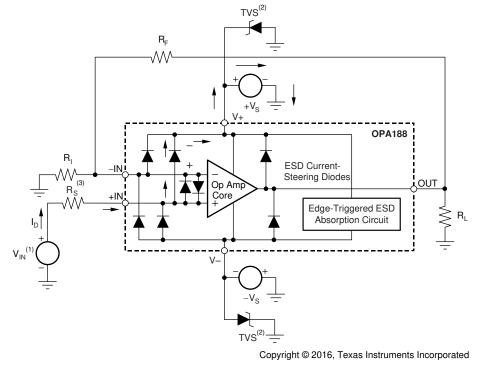

- (1) $V_{IN} = +V_S + 500 \text{ mV}.$
- (2) TVS: $+V_{S(max)} > V_{TVSBR(min)} > +V_S$.
- (3) Suggested value is approximately 1 k Ω .

Figure 43. Equivalent Internal ESD Circuitry Relative to a Typical Circuit Application

The OPA188 input terminals are protected from excessive differential voltage with back-to-back diodes, as shown in Figure 43. In most circuit applications, the input protection circuitry has no consequence. However, in low-gain and G = 1 circuits, fast-ramping input signals can forward-bias these diodes because the output of the amplifier cannot respond rapidly enough to the input ramp. If the input signal is fast enough to create this forward-bias condition, the input signal current must be limited to 10 mA or less. If the input signal current is not inherently limited, an input series resistor can be used to limit the signal input current. This input series resistor degrades the low-noise performance of the OPA188 . Figure 43 shows an example configuration that implements a current-limiting feedback resistor.

8.4 Device Functional Modes

The OPA188 has a single functional mode, and is operational when the power-supply voltage is greater than 4.5 V (± 2.25 V). The maximum power supply voltage for the OPA188 is 36 V (± 18 V).

Texas Instruments

www.ti.com

9 Application and Implementation

NOTE

Information in the following applications sections is not part of the TI component specification, and TI does not warrant its accuracy or completeness. TI's customers are responsible for determining suitability of components for their purposes. Customers should validate and test their design implementation to confirm system functionality.

9.1 Application Information


The OPA188 operational amplifier combines precision offset and drift with excellent overall performance, making this device an excellent choice for many precision applications. The precision offset drift of only 0.085 μ V/°C provides stability over the entire temperature range. In addition, the device pairs excellent CMRR, PSRR, and A_{OL} dc performance with outstanding low-noise operation. As with all amplifiers, applications with noisy or high-impedance power supplies require decoupling capacitors close to the device pins. In most cases, 0.1- μ F capacitors are adequate.


The following application examples highlight only a few of the circuits where the OPA188 can be used.

9.2 Typical Applications

9.2.1 High-Side Voltage-to-Current (V-I) Converter

The circuit shown in Figure 44 is a high-side voltage-to-current (V-I) converter. The converter translates an input voltage of 0 V to 2 V to an output current of 0 mA to 100 mA. Figure 45 shows the measured transfer function for this circuit. The low offset voltage and offset drift of the OPA188 facilitate excellent dc accuracy for the circuit.

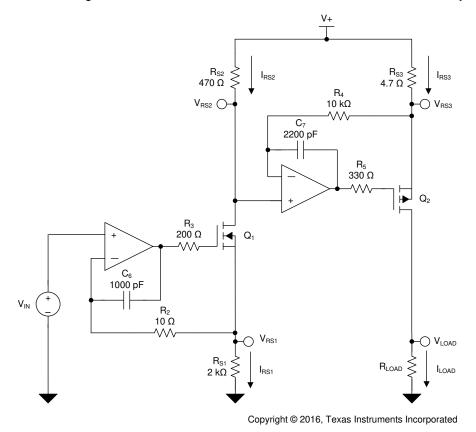





Typical Applications (continued)

9.2.1.1 Design Requirements

The design requirements are:

- Supply voltage: 5 V dc
- Input: 0 V to 2 V dc
- Output: 0 mA to 100 mA dc

9.2.1.2 Detailed Design Procedure

The V-I transfer function of the circuit is based on the relationship between the input voltage, V_{IN} , and the three current sensing resistors, R_{S1} , R_{S2} , and R_{S3} . The relationship between V_{IN} and R_{S1} determines the current that flows through the first stage of the design. The current gain from the first stage to the second stage is based on the relationship between R_{S2} and R_{S3} .

For a successful design, pay close attention to the dc characteristics of the operational amplifier chosen for the application. To meet the performance goals, this application benefits from an operational amplifier with low offset voltage, low temperature drift, and rail-to-rail output. The OPA188 CMOS operational amplifier is a high-precision, ultra-low offset, ultra-low drift amplifier, optimized for low-voltage, single-supply operation, with an output swing to within 15 mV of the positive rail. The devices in the OPA188 family use chopping techniques to provide low initial offset voltage and near-zero drift over time and temperature. Low offset voltage and low drift reduce the offset error in the system, making this device appropriate for precise dc control. The rail-to-rail output stage of the OPA188 makes sure that the output swing of the operational amplifier is able to fully control the gate of the MOSFET devices within the supply rails.

A detailed error analysis, design procedure, and additional measured results are given in reference design TIPD102, a step-by-step process to design a *High-Side Voltage-to-Current (V-I) Converter*.

For step-by-step design procedure, circuit schematics, bill of materials, PCB files, simulation results, and test results, refer to Precision Design Guide TIPD102, *High-Side Voltage-to-Current (V-I) Converter*.

9.2.1.3 Application Curves

Figure 45 shows the measured transfer function for the high-side voltage-to-current converter shown in Figure 44.

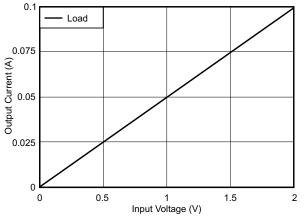


Figure 45. Measured Transfer Function for High-Side V-I Converter

TEXAS INSTRUMENTS


www.ti.com

9.2.2 Discrete INA + Attenuation for ADC With 3.3-V Supply


NOTE

The TINA-TI files shown in the following sections require that either the TINA software (from DesignSoft[™]) or TINA-TI software be installed. Download the free TINA-TI software from the TINA-TI folder.

Figure 46 shows an example of how the OPA188 is used as a high-voltage, high-impedance front-end for a precision, discrete instrumentation amplifier with attenuation. The INA159 provides the attenuation that allows this circuit to easily interface with 3.3-V or 5-V analog-to-digital converters (ADCs). Click the following link to download the TINA-TI file: Discrete INA.

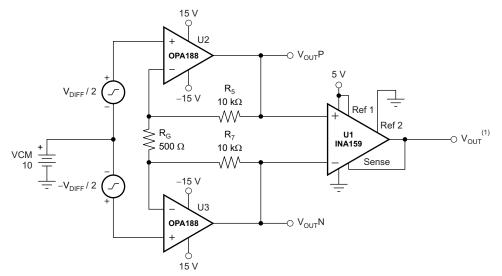


(1) $V_{OUT} = V_{DIFF} \times (41 / 5) + (\text{Ref 1}) / 2.$



9.2.3 Bridge Amplifier

Figure 47 shows the basic configuration for a bridge amplifier. Click the following link to download the TINA-TI file: Bridge Amplifier Circuit.

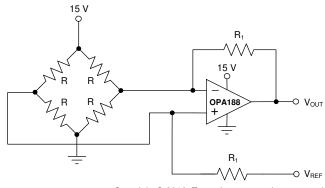

Copyright © 2016, Texas Instruments Incorporated

Figure 47. Bridge Amplifier



9.2.4 Low-Side Current Monitor

Figure 48 shows the OPA188 configured in a low-side current-sensing application. The load current (I_{LOAD}) creates a voltage drop across the shunt resistor (R_{SHUNT}). This voltage is amplified by the OPA188, with a gain of 201. The load current is set from 0 A to 500 mA, which corresponds to an output voltage range from 0 V to 10 V. The output range can be adjusted by changing the shunt resistor or gain of the configuration. Click the following link to download the TINA-TI file: Current-Sensing Circuit.

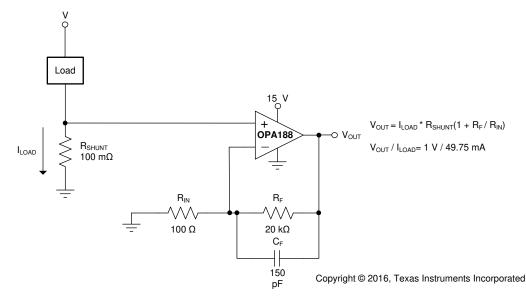


Figure 48. Low-Side Current Monitor

9.2.5 Programmable Power Supply

Figure 49 shows the OPA188 configured as a precision programmable power supply using the 16-bit, voltage output DAC8581 and the OPA548 high-current amplifier. This application amplifies the digital-to-analog converter (DAC) voltage by a value of five, and handles a large variety of capacitive and current loads. The OPA188 in the front-end provides precision and low drift across a wide range of inputs and conditions. Click the following link to download the TINA-TI file: Programmable Power-Supply Circuit.


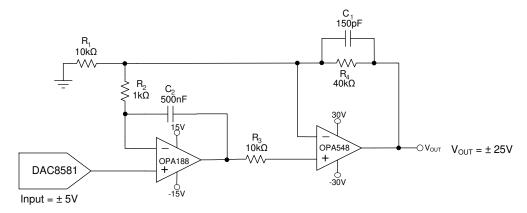


Figure 49. Programmable Power Supply

9.2.6 RTD Amplifier With Linearization

See Analog Linearization Of Resistance Temperature Detectors for an in-depth analysis of Figure 50. Click the following link to download the TINA-TI file: RTD Amplifier with Linearization.

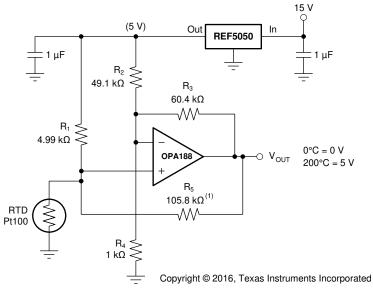

(1) R_5 provides positive-varying excitation to linearize output.

Figure 50. RTD Amplifier With Linearization



10 Power Supply Recommendations

The OPA188 is specified for operation from 4 V to 36 V (\pm 2 V to \pm 18 V); many specifications apply from –40°C to +125°C. *Typical Characteristics* presents parameters that can exhibit significant variance with regard to operating voltage or temperature.

CAUTION

Supply voltages larger than 40 V can permanently damage the device (see the Absolute Maximum Ratings).

Place 0.1-µF bypass capacitors close to the power-supply pins to reduce errors coupling in from noisy or high-impedance power supplies. For more detailed information on bypass capacitor placement, see *Layout*.


11 Layout

11.1 Layout Guidelines

For best operational performance of the device, use good printed circuit board (PCB) layout practices, including:

- Connect Low-ESR, 0.1-µF ceramic bypass capacitors between each supply pin and ground, placed as close to the device as possible. A single bypass capacitor from V+ to ground is applicable to single-supply applications.
- To reduce parasitic coupling, run the input traces as far away from the supply lines as possible.
- Use a ground plane to help distribute heat and reduces EMI noise pickup.
- Place the external components as close to the device as possible. This configuration prevents parasitic errors (such as the Seebeck effect) from occurring.
- Consider a driven, low-impedance guard ring around the critical traces. A guard ring can significantly reduce leakage currents from nearby traces that are at different potentials.

11.2 Layout Example





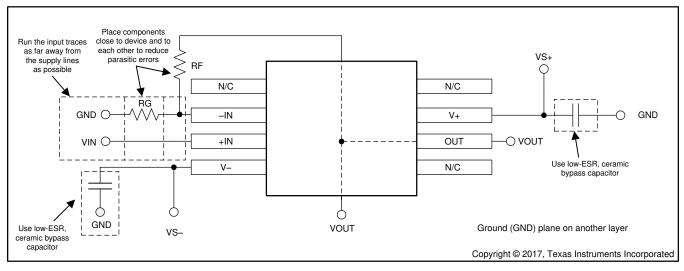


Figure 51. Layout Example

Copyright © 2013–2020, Texas Instruments Incorporated

12 Device and Documentation Support

12.1 Device Support

12.1.1 Development Support

12.1.1.1 TINA-TI[™] (Free Download Software)

TINA[™] is a simple, powerful, and easy-to-use circuit simulation program based on a SPICE engine. TINA-TI is a free, fully-functional version of the TINA software, preloaded with a library of macromodels in addition to a range of both passive and active models. TINA-TI provides all the conventional dc, transient, and frequency domain analysis of SPICE as well as additional design capabilities.

Available as a free download, TINA-TI offers extensive post-processing capability that allows users to format results in a variety of ways. Virtual instruments offer users the ability to select input waveforms and probe circuit nodes, voltages, and waveforms, creating a dynamic quick-start tool.

12.2 Documentation Support

12.2.1 Related Documentation

For related documentation see the following:

- Texas Instruments, EMI Rejection Ratio of Operational Amplifiers application report
- Texas Instruments, Feedback Plots Define Op Amp AC Performance application report
- Texas Instruments, Analog Linearization Of Resistance Temperature Detectors technical brief
- Texas Instruments, High-Side Voltage-to-Current (V-I) Converter design guide

12.3 Receiving Notification of Documentation Updates

To receive notification of documentation updates, navigate to the device product folder on ti.com. In the upper right corner, click on *Alert me* to register and receive a weekly digest of any product information that has changed. For change details, review the revision history included in any revised document.

12.4 Support Resources

TI E2E[™] support forums are an engineer's go-to source for fast, verified answers and design help — straight from the experts. Search existing answers or ask your own question to get the quick design help you need.

Linked content is provided "AS IS" by the respective contributors. They do not constitute TI specifications and do not necessarily reflect TI's views; see TI's Terms of Use.

12.5 Trademarks

Texas Instruments, E2E are trademarks of Texas Instruments. TINA-TI is a trademark of Texas Instruments, Inc and DesignSoft, Inc. *Bluetooth* is a registered trademark of Bluetooth SIG, Inc. DesignSoft, TINA are trademarks of DesignSoft, Inc. All other trademarks are the property of their respective owners.

12.6 Electrostatic Discharge Caution



This integrated circuit can be damaged by ESD. Texas Instruments recommends that all integrated circuits be handled with appropriate precautions. Failure to observe proper handling and installation procedures can cause damage.

ESD damage can range from subtle performance degradation to complete device failure. Precision integrated circuits may be more susceptible to damage because very small parametric changes could cause the device not to meet its published specifications.

12.7 Glossary

SLYZ022 — TI Glossary.

This glossary lists and explains terms, acronyms, and definitions.

www.ti.com



13 Mechanical, Packaging, and Orderable Information

The following pages include mechanical, packaging, and orderable information. This information is the most current data available for the designated devices. This data is subject to change without notice and revision of this document. For browser-based versions of this data sheet, refer to the left-hand navigation.



PACKAGING INFORMATION

Orderable part number	Status	Material type	Package Pins	Package qty Carrier	RoHS (3)	Lead finish/ MSL rating/ Ball material Peak reflow		Op temp (°C)	Part marking
	(1)	(2)			(3)	(4)	(5)		(0)
OPA188AID	Active	Production	SOIC (D) 8	75 TUBE	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	OPA188
OPA188AID.Z	Active	Production	SOIC (D) 8	75 TUBE	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	OPA188
OPA188AIDBVR	Active	Production	SOT-23 (DBV) 5	3000 LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	QXZ
OPA188AIDBVR.Z	Active	Production	SOT-23 (DBV) 5	3000 LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	QXZ
OPA188AIDBVRG4.Z	Active	Production	SOT-23 (DBV) 5	3000 LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	QXZ
OPA188AIDBVT	Active	Production	SOT-23 (DBV) 5	250 SMALL T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	QXZ
OPA188AIDBVT.Z	Active	Production	SOT-23 (DBV) 5	250 SMALL T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	QXZ
OPA188AIDGKR	Active	Production	VSSOP (DGK) 8	2500 LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	QXX
OPA188AIDGKR.Z	Active	Production	VSSOP (DGK) 8	2500 LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	QXX
OPA188AIDGKT	Active	Production	VSSOP (DGK) 8	250 SMALL T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	QXX
OPA188AIDGKT.Z	Active	Production	VSSOP (DGK) 8	250 SMALL T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	QXX
OPA188AIDR	Active	Production	SOIC (D) 8	2500 LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	OPA188
OPA188AIDR.Z	Active	Production	SOIC (D) 8	2500 LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	OPA188
OPA188AIDRG4.Z	Active	Production	SOIC (D) 8	2500 LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-40 to 125	OPA188

⁽¹⁾ **Status:** For more details on status, see our product life cycle.

⁽²⁾ Material type: When designated, preproduction parts are prototypes/experimental devices, and are not yet approved or released for full production. Testing and final process, including without limitation quality assurance, reliability performance testing, and/or process qualification, may not yet be complete, and this item is subject to further changes or possible discontinuation. If available for ordering, purchases will be subject to an additional waiver at checkout, and are intended for early internal evaluation purposes only. These items are sold without warranties of any kind.

⁽³⁾ RoHS values: Yes, No, RoHS Exempt. See the TI RoHS Statement for additional information and value definition.

⁽⁴⁾ Lead finish/Ball material: Parts may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

⁽⁵⁾ MSL rating/Peak reflow: The moisture sensitivity level ratings and peak solder (reflow) temperatures. In the event that a part has multiple moisture sensitivity ratings, only the lowest level per JEDEC standards is shown. Refer to the shipping label for the actual reflow temperature that will be used to mount the part to the printed circuit board.

⁽⁶⁾ Part marking: There may be an additional marking, which relates to the logo, the lot trace code information, or the environmental category of the part.



PACKAGE OPTION ADDENDUM

14-May-2025

Multiple part markings will be inside parentheses. Only one part marking contained in parentheses and separated by a "~" will appear on a part. If a line is indented then it is a continuation of the previous line and the two combined represent the entire part marking for that device.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

OTHER QUALIFIED VERSIONS OF OPA188 :

• Automotive : OPA188-Q1

NOTE: Qualified Version Definitions:

• Automotive - Q100 devices qualified for high-reliability automotive applications targeting zero defects




Texas

STRUMENTS

TAPE AND REEL INFORMATION



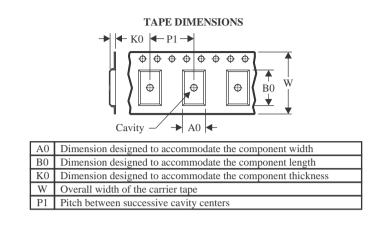

QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE




Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
OPA188AIDBVR	SOT-23	DBV	5	3000	180.0	8.4	3.23	3.17	1.37	4.0	8.0	Q3
OPA188AIDBVT	SOT-23	DBV	5	250	180.0	8.4	3.23	3.17	1.37	4.0	8.0	Q3
OPA188AIDGKR	VSSOP	DGK	8	2500	330.0	12.4	5.3	3.4	1.4	8.0	12.0	Q1
OPA188AIDGKT	VSSOP	DGK	8	250	177.8	12.4	5.3	3.4	1.4	8.0	12.0	Q1
OPA188AIDR	SOIC	D	8	2500	330.0	12.4	6.4	5.2	2.1	8.0	12.0	Q1



PACKAGE MATERIALS INFORMATION

13-May-2025

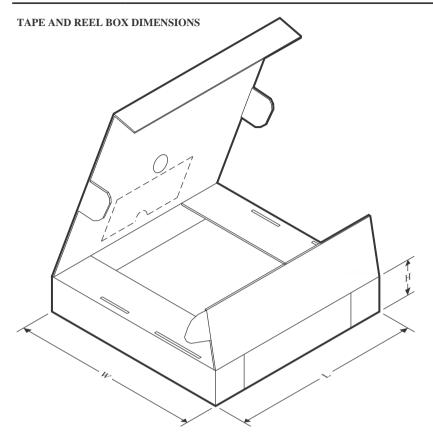

*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
OPA188AIDBVR	SOT-23	DBV	5	3000	202.0	201.0	28.0
OPA188AIDBVT	SOT-23	DBV	5	250	202.0	201.0	28.0
OPA188AIDGKR	VSSOP	DGK	8	2500	346.0	346.0	29.0
OPA188AIDGKT	VSSOP	DGK	8	250	202.0	201.0	28.0
OPA188AIDR	SOIC	D	8	2500	356.0	356.0	35.0

TEXAS INSTRUMENTS

www.ti.com

13-May-2025

TUBE



- B - Alignment groove width

*All dimensions are nominal

Device	Package Name	Package Type	Pins	SPQ	L (mm)	W (mm)	Τ (μm)	B (mm)
OPA188AID	D	SOIC	8	75	506.6	8	3940	4.32
OPA188AID.Z	D	SOIC	8	75	506.6	8	3940	4.32

D0008A



PACKAGE OUTLINE

SOIC - 1.75 mm max height

SMALL OUTLINE INTEGRATED CIRCUIT



NOTES:

1. Linear dimensions are in inches [millimeters]. Dimensions in parenthesis are for reference only. Controlling dimensions are in inches. Dimensioning and tolerancing per ASME Y14.5M.

- 2. This drawing is subject to change without notice.
- 3. This dimension does not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not exceed .006 [0.15] per side.
- 4. This dimension does not include interlead flash.
- 5. Reference JEDEC registration MS-012, variation AA.



D0008A

EXAMPLE BOARD LAYOUT

SOIC - 1.75 mm max height

SMALL OUTLINE INTEGRATED CIRCUIT



NOTES: (continued)

6. Publication IPC-7351 may have alternate designs.

7. Solder mask tolerances between and around signal pads can vary based on board fabrication site.



D0008A

EXAMPLE STENCIL DESIGN

SOIC - 1.75 mm max height

SMALL OUTLINE INTEGRATED CIRCUIT



NOTES: (continued)

8. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.

9. Board assembly site may have different recommendations for stencil design.




DBV0005A



PACKAGE OUTLINE

SOT-23 - 1.45 mm max height

SMALL OUTLINE TRANSISTOR

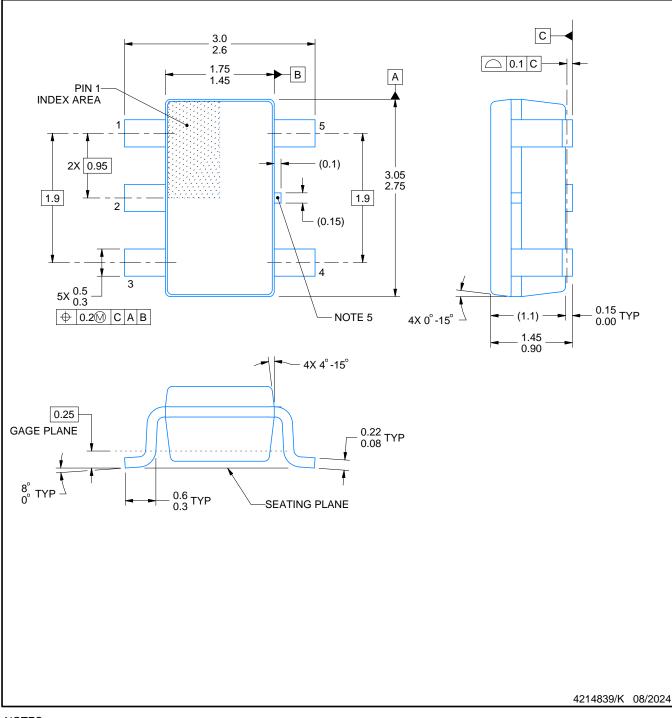

NOTES:

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.
 This drawing is subject to change without notice.
 Reference JEDEC MO-178.

- 4. Body dimensions do not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not exceed 0.25 mm per side.
- 5. Support pin may differ or may not be present.



DBV0005A

EXAMPLE BOARD LAYOUT

SOT-23 - 1.45 mm max height

SMALL OUTLINE TRANSISTOR



NOTES: (continued)

6. Publication IPC-7351 may have alternate designs.

7. Solder mask tolerances between and around signal pads can vary based on board fabrication site.



DBV0005A

EXAMPLE STENCIL DESIGN

SOT-23 - 1.45 mm max height

SMALL OUTLINE TRANSISTOR



NOTES: (continued)

8. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.

9. Board assembly site may have different recommendations for stencil design.




DGK0008A



PACKAGE OUTLINE

VSSOP - 1.1 mm max height

SMALL OUTLINE PACKAGE

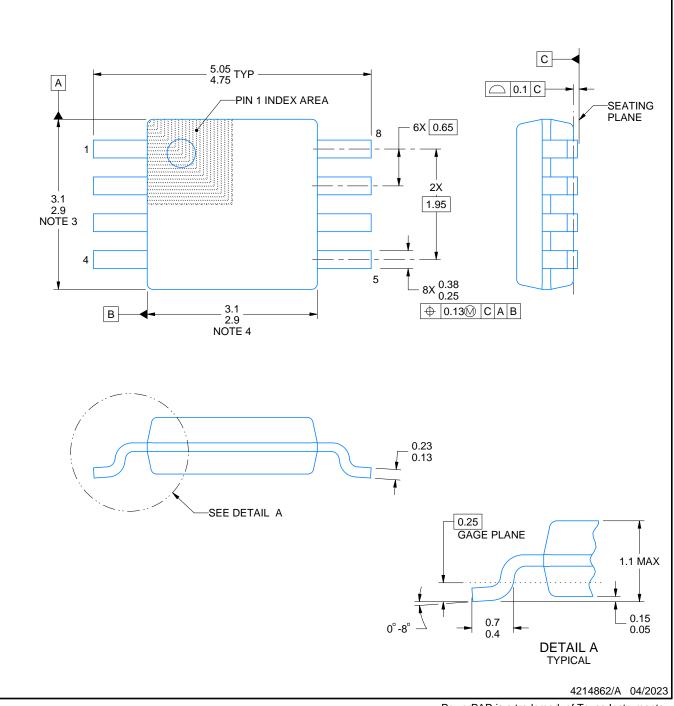

NOTES:

PowerPAD is a trademark of Texas Instruments.

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M. 2. This drawing is subject to change without notice. 3. This dimension does not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not
- exceed 0.15 mm per side.
- 4. This dimension does not include interlead flash. Interlead flash shall not exceed 0.25 mm per side.
- 5. Reference JEDEC registration MO-187.



DGK0008A

EXAMPLE BOARD LAYOUT

[™] VSSOP - 1.1 mm max height

SMALL OUTLINE PACKAGE



NOTES: (continued)

6. Publication IPC-7351 may have alternate designs.

7. Solder mask tolerances between and around signal pads can vary based on board fabrication site.

8. Vias are optional depending on application, refer to device data sheet. If any vias are implemented, refer to their locations shown

on this view. It is recommended that vias under paste be filled, plugged or tented.

9. Size of metal pad may vary due to creepage requirement.



DGK0008A

EXAMPLE STENCIL DESIGN

[™] VSSOP - 1.1 mm max height

SMALL OUTLINE PACKAGE



11. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.

12. Board assembly site may have different recommendations for stencil design.



IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2025, Texas Instruments Incorporated