


SIM7600 Series_Hardware Design_V1.03



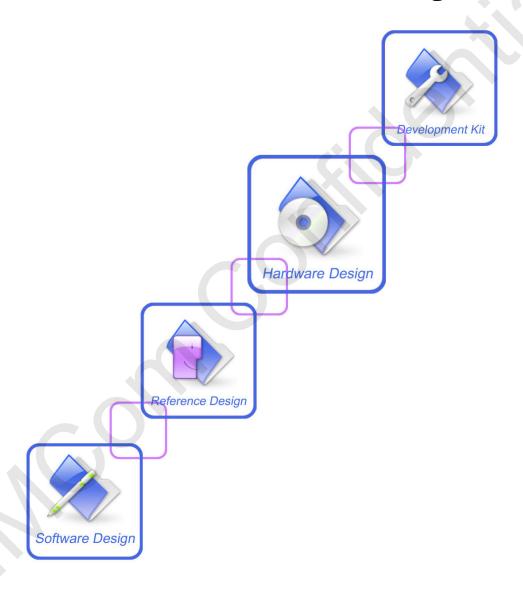

ocument Title	SIM7600 Series _Hardware Design
Version	1.03
Date	2019-4-30
Status	Released
Document Control ID	SIM7600 Series _Hardware Design _V1.03

General Notes

SIMCom offers this information as a service to its customers to support the application and engineering efforts that use the products designed by SIMCom. The information provided is based on the requirements specifically from the customers. SIMCom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, the system validation of the product designed by SIMCom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change without notice.

Copyright

This document contains the proprietary technical information which is the property of SIMCom Limited, copying of this document, giving it to others, the using or communication of the contents thereof are forbidden without the official authority by SIMCom. Offenders are liable to the payment of the damages. All rights are reserved in the event of grant of a patent or the registration of a utility model or design. All specifications supplied herein are subject to change without notice

Copyright © SIMCom Wireless Solutions Co., Ltd. 2019



Contents

Contents		3
Table Index		5
Revision Histo	ory	7
1 Introducti	on	8
1.1 Produc	et Outline	8
1.2 Hardw	are Interface Overview	9
1.3 Hardw	are Block Diagram	9
1.4 Function	onal Overview	10
2 Package In	nformation	12
	signment Overview	
2.2 Pin De	escription	14
	nical Information	
2.4 Footpr	int Recommendation	19
3 Interface A	Application	20
3.1 Power	Supply	20
3.1.1 Po	ower Supply Design Guide	21
	ecommended Power Supply Circuit	
3.1.3 Vo	oltage Monitor	22
3.2 Power	on/Power off/Reset Function	23
3.2.1 Po	ower on	23
3.2.2 Po	ower off	24
3.2.3 Re	eset Function	26
3.3 UART	Interface	26
3.3.1 Uz	ART Design Guide	27
3.3.2 RI	and DTR Behavior	28
3.4 USB I	nterface	29
3.5 USIM	Interface	30
3.5.1 US	SIM Application Guide	30
3.6 PCM I	nterface	33
3.6.1 PC	CM timing	33
3.6.2 PC	CM Application Guide	35
3.7 SD Int	erface	35
3.8 I2C Int	terface	36
3.9 SDIO	Interface	37
3.10 SPI	Interface	37
3.11 Netv	vork status	37
3.12 Fligh	nt Mode Control	38
3.13 Othe	er interface	38
3.13.1	Sink Current Source	38
3.13.2	ADC	39
3.13.3	LDO	39
SIM7600 Series	s_Hardware Design_V1.03 3	2019-4-30



4.1 GSM/UMTS/LTE RF Specifications .41 4.2 GSM /UMTS/LTE Antenna Design Guide. .43 4.3 GNSS .45 4.3.1 GNSS Technical specification .45 4.3.2 GNSS Application Guide .45 5 Electrical Specifications .47 5.1 Absolute maximum ratings .47 5.2 Operating conditions .47 5.3 Operating Mode .48 5.3.1 Operating Mode Definition .48 5.3.2 Sleep mode .49 5.3.3 Minimum functionality mode and Flight mode .49 5.4 Current Consumption .50 5.5 ESD Notes .52 6 SMT Production Guide .53 6.1 Top and Bottom View of module .53 6.2 Label Information .53 6.3 Typical SMT Reflow Profile .54 6.4 Moisture Sensitivity Level (MSL) .54 6.5 Stencil Foil Design Recommendation .55 7 Packaging .58
4.3 GNSS
4.3.1 GNSS Technical specification .45 4.3.2 GNSS Application Guide .45 5 Electrical Specifications .47 5.1 Absolute maximum ratings .47 5.2 Operating conditions .47 5.3 Operating Mode .48 5.3.1 Operating Mode Definition .48 5.3.2 Sleep mode .49 5.3.3 Minimum functionality mode and Flight mode .49 5.4 Current Consumption .50 5.5 ESD Notes .52 6 SMT Production Guide .53 6.1 Top and Bottom View of module .53 6.2 Label Information .53 6.3 Typical SMT Reflow Profile .54 6.4 Moisture Sensitivity Level (MSL) .54 6.5 Stencil Foil Design Recommendation .55 7 Packaging .56
4.3.2 GNSS Application Guide .45 5 Electrical Specifications .47 5.1 Absolute maximum ratings .47 5.2 Operating conditions .47 5.3 Operating Mode .48 5.3.1 Operating Mode Definition .48 5.3.2 Sleep mode .49 5.3.3 Minimum functionality mode and Flight mode .49 5.4 Current Consumption .50 5.5 ESD Notes .52 6 SMT Production Guide .53 6.1 Top and Bottom View of module .53 6.2 Label Information .53 6.3 Typical SMT Reflow Profile .54 6.4 Moisture Sensitivity Level (MSL) .54 6.5 Stencil Foil Design Recommendation .55 7 Packaging .56
5 Electrical Specifications 47 5.1 Absolute maximum ratings 47 5.2 Operating conditions 47 5.3 Operating Mode 48 5.3.1 Operating Mode Definition 48 5.3.2 Sleep mode 49 5.3.3 Minimum functionality mode and Flight mode 49 5.4 Current Consumption 50 5.5 ESD Notes 52 6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
5.1 Absolute maximum ratings 47 5.2 Operating conditions 47 5.3 Operating Mode 48 5.3.1 Operating Mode Definition 48 5.3.2 Sleep mode 49 5.3.3 Minimum functionality mode and Flight mode 49 5.4 Current Consumption 50 5.5 ESD Notes 52 6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
5.1 Absolute maximum ratings 47 5.2 Operating conditions 47 5.3 Operating Mode 48 5.3.1 Operating Mode Definition 48 5.3.2 Sleep mode 49 5.3.3 Minimum functionality mode and Flight mode 49 5.4 Current Consumption 50 5.5 ESD Notes 52 6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
5.3 Operating Mode 48 5.3.1 Operating Mode Definition 48 5.3.2 Sleep mode 49 5.3.3 Minimum functionality mode and Flight mode 49 5.4 Current Consumption 50 5.5 ESD Notes 52 6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
5.3.1 Operating Mode Definition 48 5.3.2 Sleep mode 49 5.3.3 Minimum functionality mode and Flight mode 49 5.4 Current Consumption 50 5.5 ESD Notes 52 6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
5.3.2 Sleep mode 49 5.3.3 Minimum functionality mode and Flight mode 49 5.4 Current Consumption 50 5.5 ESD Notes 52 6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
5.3.3 Minimum functionality mode and Flight mode 49 5.4 Current Consumption 50 5.5 ESD Notes 52 6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
5.3.3 Minimum functionality mode and Flight mode 49 5.4 Current Consumption 50 5.5 ESD Notes 52 6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
5.5 ESD Notes 52 6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
6 SMT Production Guide 53 6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
6.1 Top and Bottom View of module 53 6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
6.2 Label Information 53 6.3 Typical SMT Reflow Profile 54 6.4 Moisture Sensitivity Level (MSL) 54 6.5 Stencil Foil Design Recommendation 55 7 Packaging 56
6.3 Typical SMT Reflow Profile
6.4 Moisture Sensitivity Level (MSL)
6.5 Stencil Foil Design Recommendation
7 Packaging
Appendix
A. Reference Design
B. Coding Schemes and Maximum Net Data Rates over Air Interface
C. Related Documents 61
D. Terms and Abbreviations
E. Safety Caution65



Table Index

Table 1: Module frequency bands	8
Table 2: General features	10
Table 3: Pin definition	13
Table 4: IO parameters definition.	14
Table 5: Pin description	14
Table 6: VBAT pins electronic characteristic	20
Table 7: Recommended TVS list	21
Table 8: Power on timing and electronic characteristic	24
Table 9: Power off timing and electronic characteristic	25
Table 10: RESET pin electronic characteristic	26
Table 11: USIM electronic characteristic in 1.8V mode (USIM_VDD=1.8V)	30
Table 12: USIM electronic characteristic 3.0V mode (USIM_VDD=2.95V)	30
Table 13: Amphenol USIM socket pin description	32
Table 14: PCM format	33
Table 15: PCM timing parameters(2G/3G mode)	
Table 16: PCM timing parameters(4G mode)	34
Table 17: MMC/SD electronic characteristic (SD_DATA0-SD_DATA3, SD_CLK and SD_CMD) *	35
Table 18: NETLIGHT pin status	37
Table 19: FLIGHTMODE pin status	38
Table 20: Sink current electronic characteristic	38
Table 21: ADC1 and ADC2 electronic characteristics	39
Table 22: Electronic characteristic	40
Table 23: Conducted transmission power	41
Table 24: Operating frequencies	41
Table 25: E-UTRA operating bands	42
Table 26: Conducted receive sensitivity	42
Table 27: Reference sensitivity (QPSK)	43
Table 28: Trace loss	43
Table 29: Recommended TVS	45
Table 30: Absolute maximum ratings	47
Table 31: Recommended operating ratings	47
Table 32: 1.8V Digital I/O characteristics*	47
Table 33: Operating temperature	48
Table 34: Operating mode Definition	48
Table 35: Current consumption on VBAT Pins (VBAT=3.8V)	50
Table 36: The ESD performance measurement table (Temperature: 25 °C, Humidity: 45%)	52
Table 37: The description of label information	54
Table 38: Moisture Sensitivity Level and Floor Life	55
Table 39: Tray size	57
Table 40: Small Carton size	57
Table 41: Big Carton size	57
Table 42: Coding Schemes and Maximum Net Data Rates over Air Interface	59
Table 43: Related Documents	61



Similar in Laternite Single Decision	
Table 44: Terms and Abbreviations	63
Table 45: Safety Caution	65
Figure Index	
<u> </u>	
Figure 1: module block diagram	
Figure 2: Pin assignment overview	
Figure 3: Dimensions (Unit: mm)	
Figure 4: Footprint recommendation (Unit: mm)	
Figure 5: VBAT voltage drop during burst emission (GSM/GPRS)	
Figure 6: Power supply application circuit	
Figure 7: Linear regulator reference circuit	
Figure 8: Switching mode power supply reference circuit	
Figure 9: Reference power on/off circuit	23
Figure 10: Power on timing sequence	
Figure 11: Power off timing sequence	
Figure 12: Reference reset circuit	26
Figure 13: UART full modem	27
Figure 14: UART null modem	27
Figure 15: Reference circuit of level shift	27
Figure 16: Level matching circuit with triode	28
Figure 17: RI behaviour (SMS and URC report)	28
Figure 18: RI behaviour (voice call)	29
Figure 19: USB reference circuit	29
Figure 20: USIM interface reference circuit	31
Figure 21: Amphenol SIM card socket	
Figure 22: PCM_SYNC timing.	
Figure 23: EXT codec to module timing	
Figure 24: Module to EXT codec timing	
Figure 25: Audio codec reference circuit	
Figure 26: SD reference circuit	
Figure 27: I2C reference circuit	
Figure 28: NETLIGHT reference circuit	
Figure 29: Flight mode switch reference circuit	
Figure 30: ISINK reference circuit.	
Figure 31: Antenna matching circuit (MAIN_ANT)	
Figure 32: Antenna matching circuit (AUX_ANT)	
Figure 33: Active antenna circuit	
Figure 34: Passive antenna circuit (Default)	
Figure 35: Top and bottom view of module	
Figure 36: Label information	
Figure 37: The ramp-soak-spike reflow profile of module	
Figure 38: packaging diagram	
Figure 39: Tray drawing	
Figure 40: Small carton drawing	
Figure 41: Big carton drawing	57

6



Revision History

Data	Version	Description of change	Author
2017-10-11	1.00	Original	Ma Honggang Gao Fan
2017-11-23	1.01	Modify Table2, Table15, Table 8, Table16, Table21, Table 26 Modify Figure 4, Figure 10 Modify 3.13.3 LDO output voltage 2.85V by default. Rename VDD_EXT to VDD_AUX	Gao Fan Yuan Shijie
2018-4-11	V1.02	Modify table 1,2,5,15,22,34 Modify figure 4,36,37 Modify the document name	Yuan Shijie Gao Fan
2019-4-30	V1.03	Update table 8; Update table 10; Updata table 30;	Ma Honggang



1 Introduction

This document describes the electronic specifications, RF specifications, interfaces, mechanical characteristics and testing results of the SIMCom module. With the help of this document and other software application notes/user guides, users can understand and use module to design and develop applications quickly.

1.1 Product Outline

Aimed at the global market, the module support GSM, WCDMA, LTE-TDD and LTE-FDD. Users can choose the module according to the wireless network configuration. The supported radio frequency bands are described in the following table.

Table 1: Module frequency bands

Standard	Frequency	SIM7600A	SIM7600A-H	SIM7600V-H	SIM7600E	SIM7600E-H	SIM7600JC-H	SIM7600SA	SIM7600SA-H
	850MHz							√	4
GSM	900MHz				1	√		√	4
	1800M Hz				4	4		√	✓
	1900M Hz							√	✓
	B1				4	4		√	✓
WCDMA	B2	✓	1					√	✓
WCDMA	B5	√	4		√	√		√	✓
	B8				√	√		√	4
	FDD B1				√	√	√	√	4
	FDD B2	✓	4	√				√	4
	FDD B3				√	√	√	√	✓
	FDD B4	1	√	√				√	✓
	FDD B5			✓	√	√		√	4
LTE	FDD B7				√	√		√	4
	FDD B8				√	4	4	√	✓
	FDD B12	√	4						
	FDD B13			√					
	FDD B18						4		
	FDD B19						4		



	FDD B20				✓	√			
	FDD B26						√		
	FDD B28							√	√
	TDD B38				4	√			
	TDD B40				√	√		4	4
	TDD B41				4	4			
Category		CAT1	CAT4	CAT4	CAT1	CAT4	CAT4	CAT1	CAT4

With a small physical dimension of 30*30*2.9 mm and with the functions integrated, the module can meet almost any space requirement in users' applications, such as smart phone, PDA, industrial handheld, machine-to-machine and vehicle application, etc.

1.2 Hardware Interface Overview

The interfaces are described in detail in the next chapters include:

- Power Supply
- USB Interface
- UART Interface
- MMC/SD Interface
- SDIO Interface
- USIM Interface
- GPIO
- ADC
- LDO Power Output
- Current Sink Source
- PCM Interface
- SPI Interface
- I2C Interface

1.3 Hardware Block Diagram

The block diagram of the module is shown in the figure below.



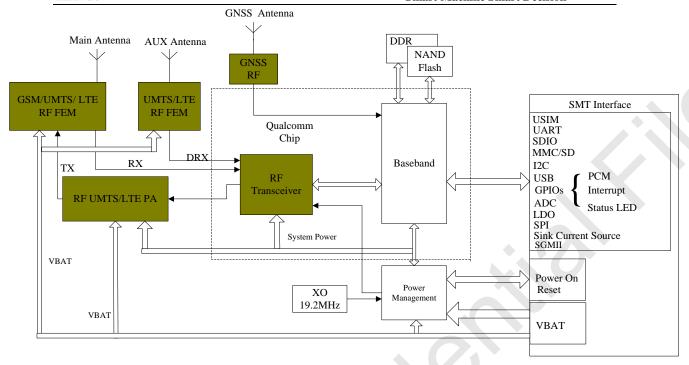


Figure 1: module block diagram

1.4 Functional Overview

Table 2: General features

Feature	Implementation		
Power supply	Single supply voltage $3.4 \sim 4.2 \text{V}$, recommend 3.8V .		
Power saving	Current in sleep mode : <5mA		
Radio frequency bands	Please refer to the table 1		
	GSM/GPRS power class:		
	GSM850: 4 (2W)		
	EGSM900: 4 (2W)		
	DCS1800: 1 (1W)		
	PCS1900: 1 (1W)		
	EDGE power class:		
Transmitting power	GSM850: E2 (0.5W)		
	EGSM900: E2 (0.5W)		
	DCS1800: E1 (0.4W)		
	PCS1900: E1 (0.4W)		
	UMTS power class:		
	WCDMA :3 (0.25W)		
	LTE power class: 3 (0.25W)		
Data Transmission	GPRS multi-slot class 12		
Throughput	EDGE multi-slot class 12		



	UMTS R99 speed: 384 kbps DL/UL			
	HSPA+: 5.76 Mbps(UL), 42 Mbps(DL)			
	HSDPA/HSUPA: 2.2 Mbps(UL), 2.8 Mbps(DL)			
	LTE CAT 1: 10 Mbps(DL)			
	5 Mbps(UL)			
	LTE-FDD CAT4: 150 Mbps (DL), 50 Mbps (UL)			
	LTE-TDD CAT4: 130 Mbps (DL), 35 Mbps (UL)			
	GSM/UMTS/LTE main antenna.			
Antenna	UMTS/LTE auxiliary antenna			
	GNSS antenna			
GNSS	GNSS engine (GPS,GLONASS and BD)			
GNSS	Protocol: NMEA			
	MT, MO, CB, Text and PDU mode			
SMS	SMS storage: USIM card or ME(default)			
	Transmission of SMS alternatively over CS or PS.			
USIM interface	Support identity card: 1.8V/3V			
LIODA 1' ' 11'	Support SAT class 3, GSM 11.14 Release 98			
USIM application toolkit	Support USAT			
Phonebook management	Support phonebook types: DC,MC,RC,SM,ME,FD,ON,LD,EN			
	Support PCM interface			
Audio feature	Only support PCM master mode and short frame sync, 16-bit linear data			
	formats			
	A full modem serial port by default			
	Baud rate: 300bps to 4Mbps(default:115200bps)			
UART interface	Autobauding baud rate: 9600,19200,38400,57600,115200bps			
UARI interface	Can be used as the AT commands or data stream channel			
	Support RTS/CTS hardware handshake			
	Multiplex ability according to GSM 07.10 Multiplexer Protocol			
MMC/SD	Support MMC and SD cards with 2.85 V on SD port			
SDIO	Support SDIO with 1.8 V only on SDIO port			
USB	USB 2.0 high speed interface			
Firmware upgrade	Firmware upgrade over USB interface or FOTA			
Dhysical share to risting	Size:30*30*2.9m			
Physical characteristics	Weight:5.7 g			
	Normal operation temperature: -30°C to +80°C			
Temperature range	Extended operation temperature: -40°C to +85°C*			
	Storage temperature -45°C to +90°C			

^{*}Note: Module is able to make and receive voice calls, data calls, SMS and make GPRS/UMTS/HSPA+/LTE traffic in -40° $^{\circ}$ C ~ +85° $^{\circ}$ C. The performance will be reduced slightly from the 3GPP specifications if the temperature is outside the normal operating temperature range and still within the extreme operating temperature range.



2 Package Information

2.1 Pin Assignment Overview

All functions of the module will be provided through 87 pads that will be connected to the customers' platform. The following Figure is a high-level view of the pin assignment of the module.

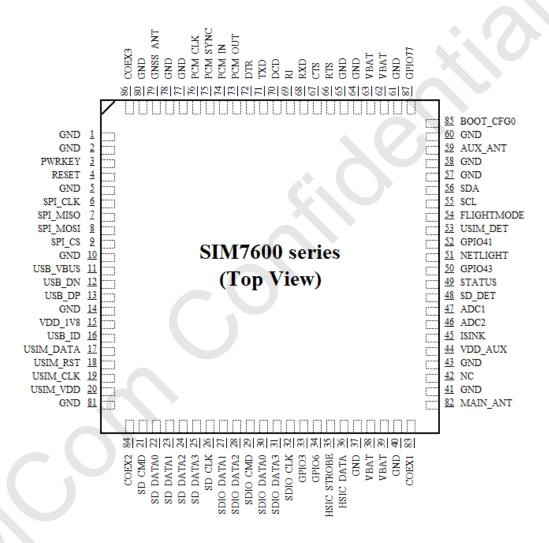


Figure 2: Pin assignment overview



Table 3: Pin definition

Pin No.	Pin name	Pin No.	Pin name
1	GND	2	GND
3	PWRKEY	4	RESET
5	GND	6	SPI_CLK
7	SPI_MISO	8	SPI_MOSI
9	SPI_CS	10	GND
11	USB_VBUS	12	USB_DN
13	USB_DP	14	GND
15	VDD_1V8	16	USB_ID
17	USIM_DATA	18	USIM_RST
19	USIM_CLK	20	USIM_VDD
21	SD_CMD	22	SD_DATA0
23	SD_DATA1	24	SD_DATA2
25	SD_DATA3	26	SD_CLK
27	SDIO_DATA1	28	SDIO_DATA2
29	SDIO_CMD	30	SDIO_DATA0
31	SDIO_DATA3	32	SDIO_CLK
33	GPIO3	34	GPIO6
35	HSIC_STROBE	36	HSIC_DATA
37	GND	38	VBAT
39	VBAT	40	GND
41	GND	42	NC (RESERVED)
43	GND	44	VDD_AUX
45	ISINK	46	ADC2
47	ADC1	48	SD_DET
49	STATUS	50	GPIO43*
51	NETLIGHT	52	GPIO41
53	USIM_DET	54	FLIGHTMODE
55	SCL	56	SDA
57	GND	58	GND
59	AUX_ANT	60	GND
61	GND	62	VBAT
63	VBAT	64	GND
65	GND	66	RTS
67	CTS	68	RXD



69	RI	70	DCD
71	TXD	72	DTR
73	PCM_OUT	74	PCM_IN
75	PCM_SYNC	76	PCM_CLK
77	GND	78	GND
79	GNSS_ANT	80	GND
81	GND	82	MAIN_ANT
83	COEX1*	84	COEX2
85	BOOT_CFG0*	86	COEX3*
87	GPIO77		

NOTE: Before the normal power up, GPIO43, COEX1, COEX3 or BOOT_CFG0 cannot be pulled up, otherwise module will not be powered up normally.

2.2 Pin Description

Table 4: IO parameters definition

Pin type	Description
PI	Power input
PO	Power output
AI	Analog input
AIO	Analog input/output
I/O	Bidirectional input /output
DI	Digital input
DO	Digital output
DOH	Digital output with high level
DOL	Digital output with low level
PU	Pull up
PD	Pull down

Table 5: Pin description

Pin name	Pin No.	Default status	Description	Comment
Power supply				
VBAT	38,39, 62,63	PI	Power supply, voltage range: $3.4\sim4.2V$.	
VDD_AUX	44	PO	LDO power output for other external circuits with Max 150mA current output. Its output voltage is 2.85V by default. (The voltage can be configured from 1.7V to 3.05V	If unused, keep it open.



a SUISEA NO T company			Smart Machi	ne Smart Decision
			by AT command).	
VDD_1V8	15	РО	1.8 output with Max 50mA current output for external circuit, such as level shift circuit.	If unused, keep it open.
GND	1,2,5, 10,14,37,40,41,4 3,57,58, 60,61,64 ,65,77,7 8,80,81		Ground	
System Control	l			
PWRKEY	3	DI,PU	System power on/off control input, active low.	The high voltage is 0.8V;
RESET	4	DI, PU	System reset control input, active low.	RESET has been pulled up to 1.8V via 40Kohm resistor internally.
SD interface				
SD_CMD	21	DO	SDIO command	
SD_DATA0	22	I/O	CIV	SIM7600A,SIM7600 A-H and
SD_DATA1	23	I/O	SDIO data	SIM7600V-H do not
SD_DATA2	24	I/O		support SD card. If unused, keep them
SD_DATA3	25	I/O		open.
SD_CLK	26	DO	SDIO clock	
USIM interface	è			
USIM_DATA	17	I/O,PU	USIM Card data I/O, which has been pulled up via a 10KR resistor to USIM_VDD internally. Do not pull it up or down externally.	
USIM_RST	18	DO	USIM Reset	All lines of USIM
USIM_CLK	19	DO	USIM clock	interface should be protected against ESD.
USIM_VDD	20	РО	Power output for USIM card, its output Voltage depends on USIM card type automatically. Its output current is up to 50mA.	
SPI interface				
SPI_CLK	6	DO	SPI clock output	
SPI_MISO	7	DI	SPI master in/slave out data	RESERVED
SPI_MOSI	8	DO	SPI master out/slave in data	



a SUSSANDT company			Smart Machin	ne Smart Decision
SPI_CS	9	DO	SPI chip-select output	
USB				
USB_VBUS	11	DI,PD	Valid USB detection input with 3.0~5.25V detection voltage	
USB_DN	12	I/O	Negative line of the differential, bi-directional USB signal.	
USB_DP	13	I/O	Positive line of the differential, bi-directional USB signal.	
USB_ID	16	DI	High-speed USB ID input	Keep it open.
UART interface	e			
RTS	66	DOL	Request to send	
CTS	67	DI,PU	Clear to Send	
RXD	68	DI,PU	Receive Data	
RI	69	DOH	Ring Indicator	If unused, keep them
DCD	70	DOH	Carrier detects	open.
TXD	71	DOH	Transmit Data	
DTR	72	DI,PU	DTE get ready	
I2C interface				
SCL	55	DO	I2C clock output	If unused, keep open, or else pull them up
SDA	56	I/O	I2C data input/output	via $2.2K\Omega$ resistors to 1.8V.
SDIO interface				
SDIO_DATA1	27	I/O	SDIO data1	
SDIO_DATA2	28	I/O	SDIO data2	
SDIO_CMD	29	DO	SDIO command	
SDIO_DATA0	30	I/O	SDIO data0	
SDIO_DATA3	31	I/O	SDIO data3	
SDIO_CLK	32	DO	SDIO clock	
HSIC interface				
HSIC_STROB E	35	HSIC strobe wakeup	HSIC strobe wakeup	If use, please refer to document [27] Otherwise please keep
HSIC_DATA	36	I/O	HSIC data	them open.
PCM interface				
PCM_OUT	73	DO	PCM data output.	
PCM_IN	74	DI	PCM data input.	If unused, please keep
PCM_SYNC	75	DO	PCM data frame sync signal.	them open.
PCM_CLK	76	DO	PCM data bit clock.	
GPIO				
NETLIGHT	51	DO	LED control output as network status indication.	If unused, keep them open.



FLIGHTMODE 54 DI,PU Mode Mode Low level; Flight Mode Cow level; Flight Mode Cow level; Flight Mode Coperating status output. High level; Power on and firmware ready Low level; Power off GPIO41 52 IO GPIO GPIO GPIO43 50 IO GPIO GPIO GPIO6 34 IO GPIO Optional; SD card detecting input. H: SD card is inserted Default: GPIO Optional: USIM card detecting input. H: USIM is removed L: USIM is removed L: USIM is inserted GPIO7 87 IO GPIO GPIO GPIO GPIO GPIO GPIO GPIO G	a SUISEA AUTCOMpanyi			Siliai t Macilli	le Siliai t Decision
STATUS 49 DO High level: Power on and firmware ready Low level: Power off GPIO41 52 IO GPIO GPIO3 50 IO GPIO GPIO6 34 IO GPIO SD_DET 48 IO Default: GPIO Optional: SD card detecting input. H: SD card is removed L: SD card is inserted Default: GPIO Optional: SUM card detecting input. H: USIM is removed L: USIM is inserted GPIO77 87 IO GPIO RF interface MAIN_ANT 82 AIO MAIN antenna soldering pad GNSS_ANT 79 AI GNSS antenna soldering pad AUX_ANT 59 AI Auxiliary antenna soldering pad Other interface ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input 1 ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. BOOT_CFGO 85 DI.PD BOOT_CFGO 85 DI.PD BOOT_CFGO 85 DI.PD High level: Power off GPIO GPIO GPIO Default: GPIO Optional: SD card detecting input. H: USIM is removed L: SD card is inserted Default: GPIO Optional: SIM card detecting input. H: USIM is nemoved L: SD card is removed L: SD card is removed L: SD card is removed L: SD card detecting input. H: USIM is removed L: SD card is removed L: SD card is removed L: SD card detecting input. H: USIM is nemoved L: SD card is removed L: SD card detecting input. H: USIM is removed L: SD card is removed L: SD card detecting input. H: USIM is removed L: SD card is removed L: SD card detecting input. Mall ary antenna soldering pad If unused, please kee them open. If unused, keep them open. Do Not PULL UP COEXI AND COEXI DO NOT PULL UP COEXI AND COEXI DO NOT PULL UP COEXI AND COEXI DO NOT PULL UP BOOT CFGO	FLIGHTMODE	54	DI,PU	High level(or open): Normal Mode	NORMAL POWER
GPIO43 50 IO GPIO GPIO3 33 IO GPIO GPIO6 34 IO GPIO SD_DET 48 IO Default: GPIO Optional: SD card detecting input. H: SD card is removed L: SD card is inserted Default: GPIO Optional: USIM card detecting input. H: USIM is stemoved L: USIM is stemoved L: USIM is inserted GPIO77 87 IO GPIO RF interface MAIN _ANT 82 AIO MAIN antenna soldering pad GNSS_ANT 79 AI GNSS antenna soldering pad GNSS_ANT 79 AI GNSS antenna soldering pad Other interface ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input I funused, please kee them open. ADC2 46 AI Analog-digital converter input I funused, please kee them open. COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. BOOT_CFG0 85 DI,PD Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_IVS during power up. BOOT_CFG0 VONTPULL UP BOOT_CFG0	STATUS	49	DO	High level: Power on and firmware ready	
GPIO3 33 IO GPIO GPIO6 34 IO GPIO SD_DET 48 IO Default: GPIO Optional: SD card detecting input. H: SD card is removed L: SD card is inserted Default: GPIO Optional: USIM card detecting input. H: SD card is inserted Default: GPIO Optional: USIM card detecting input. H: USIM is removed L: USIM is removed L: USIM is inserted GPIO77 87 IO GPIO RF interface MAIN _ANT 82 AIO MAIN antenna soldering pad GNSS_ANT 79 AI GNSS antenna soldering pad AUX_ANT 59 AI Auxiliary antenna soldering pad Other interface ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input I ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O RF synchronizing between Wi-Fi and LTE. DO NOT PULL UP COEX1 84 I/O RF synchronizing between Wi-Fi and LTE. BOOT_CFGO 85 DI,PD Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. DO NOT PULL UP BOOT_CFGO BOON_COEAL DURING NORMAL POWER UP!	GPIO41	52	IO	GPIO	
GPIO6 34 IO GPIO Default: GPIO Optional: SD card detecting input. H: SD card is removed L: SD card detecting input. H: SD card is inserted Default: GPIO Optional: USIM card detecting input. H: USIM is removed L: USIM card detecting input. H: USIM is inserted GPIO77 87 IO GPIO RF interface MAIN _ANT 82 AIO MAIN antenna soldering pad GNSS_ANT 79 AI GNSS antenna soldering pad AUX_ANT 59 AI Auxiliary antenna soldering pad Other interface ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input 1 ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. BOOT_CFG0 85 DI,PD Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. DO NOT PULL UP COEX1 AND COEX DURING NORMAL POWER UP!	GPIO43	50	Ю	GPIO	
SD_DET 48 IO Default: GPIO Optional: SD card detecting input. H: SD card is removed L: SD card is inserted Default: GPIO Optional: USIM card detecting input. H: USIM card detecting input. H: USIM is removed L: USIM is removed L: USIM is inserted GPIO77 87 IO GPIO RF interface MAIN _ANT 82 AIO MAIN antenna soldering pad GNSS_ANT 79 AI GNSS antenna soldering pad AUX_ANT 59 AI Auxiliary antenna soldering pad Other interface ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input 1 ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. BOOT_CFG0 85 DI,PD Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	GPIO3	33	IO	GPIO	
SD_DET 48 IO Optional: SD card detecting input. H: SD card is removed L: SD card is inserted Default: GPIO Optional: USIM card detecting input. H: USIM is removed L: USIM is removed L: USIM is inserted GPIO77 87 IO GPIO RF interface MAIN _ANT 82 AIO MAIN antenna soldering pad GNSS_ANT 79 AI GNSS antenna soldering pad AUX_ANT 59 AI Auxiliary antenna soldering pad Other interface ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input 1 ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. BOOT_CFG0 85 DI,PD Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	GPIO6	34	IO	GPIO	
USIM_DET 53 IO Optional: USIM card detecting input. H: USIM is removed L: USIM is inserted GPIO77 87 IO GPIO RF interface MAIN _ANT 82 AIO MAIN antenna soldering pad GNSS_ANT 79 AI GNSS antenna soldering pad AUX_ANT 59 AI Auxiliary antenna soldering pad Other interface ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input 1 ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. BOOT_CFG0 85 DI,PD Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. Do NOT_PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	SD_DET	48	Ю	Optional: SD card detecting input. H: SD card is removed	
MAIN _ANT	USIM_DET	53	Ю	Optional: USIM card detecting input. H: USIM is removed	
MAIN _ANT	GPIO77	87	IO	GPIO	
GNSS_ANT 79 AI GNSS antenna soldering pad AUX_ANT 59 AI Auxiliary antenna soldering pad Other interface ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input 1 ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. If unused, please kee them open. If unused, keep them open. DO NOT PULL UP COEX1 AND COEX2 DURING NORMAL POWER UP! Do place 2 test points for debug. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	RF interface				
Other interface ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input 1 ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. BOOT_CFG0 85 DI,PD Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. If unused, please kee them open. If unused, keep them open. DO NOT PULL UP COEX1 AND COEX DURING NORMAL POWER UP! Do place 2 test points for debug. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	MAIN _ANT	82	AIO	MAIN antenna soldering pad	
ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input 1 If unused, please kee them open. ADC2 46 AI Analog-digital converter input 2 If unused, please kee them open. COEX1 83 I/O RF synchronizing between Wi-Fi and LTE. COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. COEX3 86 I/O Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. DI,PD BOOT_CFG0 BOOT_CFG0 DURING NORMAL POWER UP!	GNSS_ANT	79	AI	GNSS antenna soldering pad	
ISINK 45 PI Ground-referenced current sink. ADC1 47 AI Analog-digital converter input 1 ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. BOOT_CFG0 85 DI,PD Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. If unused, please kee them open. If unused, keep them open. DO NOT PULL UP COEX1 AND COEX DURING NORMAL POWER UP! Do place 2 test points for debug. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	AUX_ANT	59	AI	Auxiliary antenna soldering pad	
ADC1 47 AI Analog-digital converter input 1 If unused, please kee them open. ADC2 46 AI Analog-digital converter input 2 If unused, please kee them open. COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. COEX3 86 I/O Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. DIF unused, please kee them open. If unused, keep them open. DO NOT PULL UP COEX1 AND COEX DURING NORMAL POWER UP! Do place 2 test points for debug. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	Other interface				
ADC1 4/ AI 1 In unused, please Receithem open. ADC2 46 AI Analog-digital converter input 2 COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. COEX3 86 I/O BOOT_CFG0 85 DI,PD Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. If unused, keep them open. DO NOT PULL UP COEX1 AND COEX1 DURING NORMAL POWER UP! Do place 2 test points for debug. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	ISINK	45	PI	Ground-referenced current sink.	
COEX1 83 I/O COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. COEX3 86 I/O Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. If unused, keep them open. DO NOT PULL UP COEX1 AND COEX1 DURING NORMAL POWER UP! Do place 2 test points for debug. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	ADC1	47	AI		If unused, please keep them open.
COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. Open. DO NOT PULL UP COEX1 AND COEX. DURING NORMAL POWER UP! Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. Open. DO NOT PULL UP COEX1 AND COEX. DURING NORMAL POWER UP!	ADC2	46	AI		
COEX2 84 I/O RF synchronizing between Wi-Fi and LTE. DO NOT PULL UP COEX1 AND COEX DURING NORMAL POWER UP! Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. Do place 2 test points for debug. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	COEX1	83	I/O		•
BOOT_CFG0 85 DURING NORMAL POWER UP! Boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 during power up. Do place 2 test points for debug. DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	COEX2	84	I/O		DO NOT PULL UP
BOOT_CFG0 85 DI,PD USB download mode by connect 85 pin to VDD_1V8 during power up. BOOT_CFG0 boot configuration input. Module will be forced into USB download mode by connect 85 pin to VDD_1V8 DO NOT PULL UP BOOT_CFG0 DURING NORMAL POWER UP!	COEX3	86	I/O	W1-F1 and LTE.	DURING NORMAL
NC 42 No connection. Keep it open	BOOT_CFG0	85	DI,PD	Module will be forced into USB download mode by connect 85 pin to VDD_1V8	DO NOT PULL UP BOOT_CFG0 DURING NORMAL
	NC	42		No connection.	Keep it open



2.3 Mechanical Information

The following figure shows the package outline drawing of module.

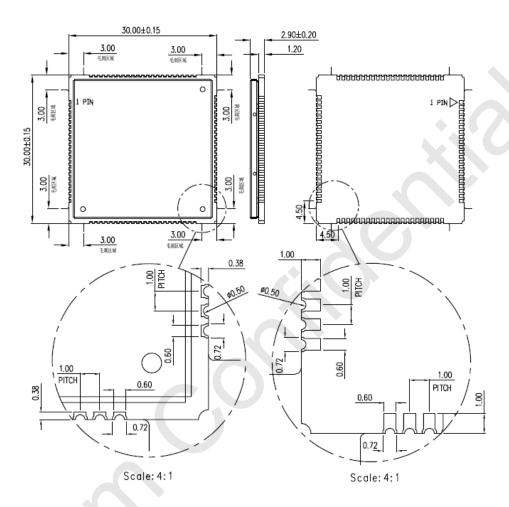


Figure 3: Dimensions (Unit: mm)



2.4 Footprint Recommendation

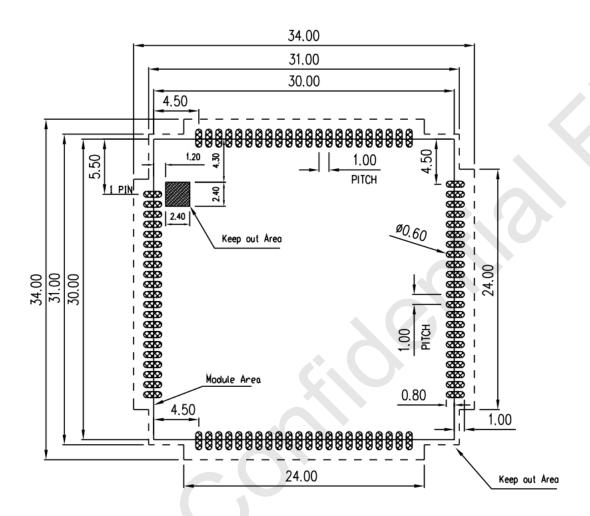


Figure 4: Footprint recommendation (Unit: mm)



3 Interface Application

3.1 Power Supply

The power supply pins of module include 4 pins (pin 62&63, pin 38&39) named VBAT.

The 4 VBAT pads supply the power to RF and baseband circuits directly. On VBAT pads, the ripple current up to 2A typically, due to GSM/GPRS emission burst (every 4.615ms), may cause voltage drop. So the power supply for these pads must be able to provide sufficient current up to more than 2A in order to avoid the voltage drop is more than 300mV.

The following figure shows the VBAT voltage ripple wave at the maximum power transmit phase.

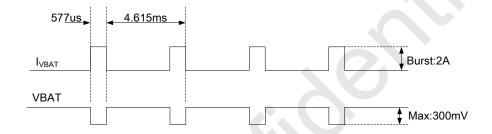


Figure 5: VBAT voltage drop during burst emission (GSM/GPRS)

Note: The test condition: The voltage of power supply for VBAT is 3.8V, Cd=100 μ F tantalum capacitor (ESR=0.7 Ω) and Cf=100nF (Please refer to Figure 6—Application circuit).

Table 6: VBAT pins electronic characteristic

Symbol	Description		Typ.	Max.	Unit
VBAT	Module power voltage		3.8	4.2	V
I _{VBAT(peak)}	Module power peak current in normal mode.		2	-	A
I _{VBAT(average)}	Module power average current in normal mode		refer to t	he table	34
I _{VBAT(sleep)}	Power supply current in sleep mode				
$I_{VBAT(power-off)}$	Module power current in power off mode.		-	20	uA



3.1.1 Power Supply Design Guide

Make sure that the voltage on the VBAT pins will never drop below 3.4V, even during a transmit burst, when current consumption may rise up to 2A. If the voltage drops below 3.4V, the RF performance may be affected.

Note: If the power supply for VBAT pins can support up to 2A, more than 300uF capacitors are recommended. Otherwise users must use a total of 1000uF capacitors typically, in order to avoid of the voltage drop more than 300mV.

Some multi-layer ceramic chip (MLCC) capacitors (0.1/1uF) with low ESR in high frequency band can be used for EMC.

These capacitors should be put as close as possible to VBAT pads. Also, users should keep VBAT trace on circuit board wider than 2 mm to minimize PCB trace impedance. The following figure shows the recommended circuit. Recommend part of FB101 is BLM21PG300SN1D or MPZ2012S221A $_{\circ}$

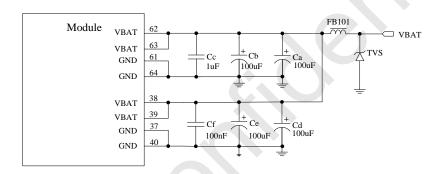


Figure 6: Power supply application circuit

In addition, in order to guard for ESD or surge protection, it is suggested to use a TVS to protect the module.

Note: customer could only power pin 62, 63 or only power pin 38, 39, for these pins are connected inside the module.

Table 7: Recommended TVS list

No.	Manufacturer	Part Number	Power dissipation	Package
1	Js-ele	ESDBW5V0A1	5V	DFN1006-2L
2	Prisem	PESDHC2FD4V5BH	4.5V	DFN1006-2L
3	Way-on	WS05DPF-B	5V	DFN1006-2L
4	Will semi	ESD5611N	5V	DFN1006-2L
5	Will semi	ESD56151W05	5V	SOD-323
6	Way-on	WS4.5DPV	4.5V	DFN1610-2L



3.1.2 Recommended Power Supply Circuit

It is recommended that a switching mode power supply or a linear regulator power supply is used. It is important to make sure that all the components used in the power supply circuit can resist a peak current up to 2A.

The following figure shows the linear regulator reference circuit with 5V input and 3.8V output.

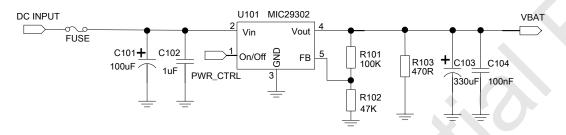


Figure 7: Linear regulator reference circuit

If there is a big voltage difference between input and output for VBAT power supply, or the efficiency is extremely important, then a switching mode power supply will be preferable. The following figure shows the switching mode power supply reference circuit.

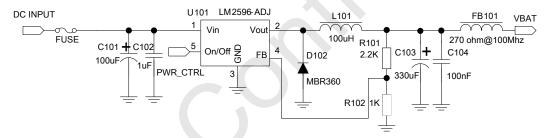


Figure 8: Switching mode power supply reference circuit

Note: The Switching Mode power supply solution for VBAT must be chosen carefully against Electro Magnetic Interference and ripple current from depraving RF performance.

3.1.3 Voltage Monitor

To monitor the VBAT voltage, the AT command "AT+CBC" can be used.

For monitoring the VBAT voltage outside or within a special range, the AT command "AT+CVALARM" can be used to enable the under-voltage warning function.

If users need to power off module, when the VBAT voltage is out of a range, the AT command "AT+CPMVT" can be used to enable under-voltage power-off function.

Note: Under-voltage warning function and under-voltage power-off function are disabled by default. For more information about these AT commands, please refer to Document [1].



3.2 Power on/Power off/Reset Function

3.2.1 Power on

module can be powered on by pulling the PWRKEY pin down to ground.

The PWRKEY pin has been pulled up with a diode to 1.8V internally, so it does not need to be pulled up externally. It is strongly recommended to put a100nF capacitor, an ESD protection diode, close to the PWRKEY pin as it would strongly enhance the ESD performance of PWRKEY pin. Please refer to the following figure for the recommended reference circuit.

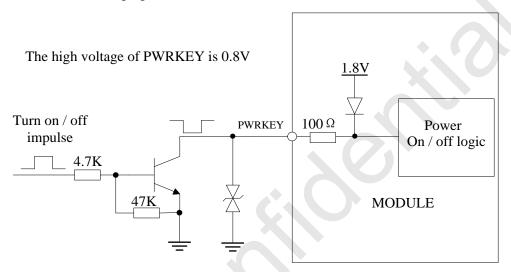


Figure 9: Reference power on/off circuit

Note: Module could be automatically power on by connecting PWRKEY pin to ground via 0R resistor directly.

The power-on scenarios are illustrated in the following figure.

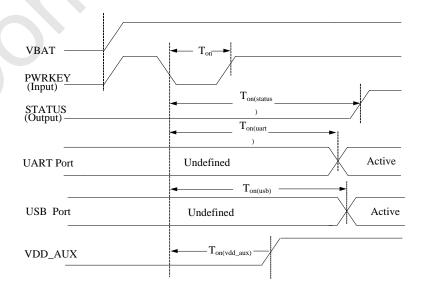




Figure 10: Power on timing sequence

Table 8: Power on timing and electronic characteristic

Symbol	Parameter	Min.	Ty p.	Max.	Unit
Ton	The time of active low level impulse of PWRKEY pin to power on module	100	500	-	ms
T _{on(status)}	The time from power-on issue to STATUS pin output high level(indicating power up ready)	12	16		S
T _{on(uart)}	The time from power-on issue to UART port ready	11	12	10	S
$T_{on(vdd_aux)}$	The time from power-on issue to VDD_AUX ready		2.5	-	S
T _{on(usb)}	The time from power-on issue to USB port ready	11	12	-	S
V_{IH}	Input high level voltage on PWRKEY pin	0.6	0.8	1.8	V
V_{IL}	Input low level voltage on PWRKEY pin	-0.3	0	0.5	V

3.2.2 Power off

The following methods can be used to power off module.

- Method 1: Power off module by pulling the PWRKEY pin down to ground.
- Method 2: Power off module by AT command "AT+CPOF".
- Method 3: over-voltage or under-voltage automatic power off. The voltage range can be set by AT command "AT+CPMVT".
- Method 4: over-temperature or under-temperature automatic power off.

Note: If the temperature is outside the range of -30 \sim +80 C, some warning will be reported via AT port. If the temperature is outside the range of -40 \sim +85 C, module will be powered off automatically.

For details about "AT+CPOF" and "AT+CPMVT", please refer to Document [1].

These procedures will make module disconnect from the network and allow the software to enter a safe state, and save data before module be powered off completely.

The power off scenario by pulling down the PWRKEY pin is illustrated in the following figure.



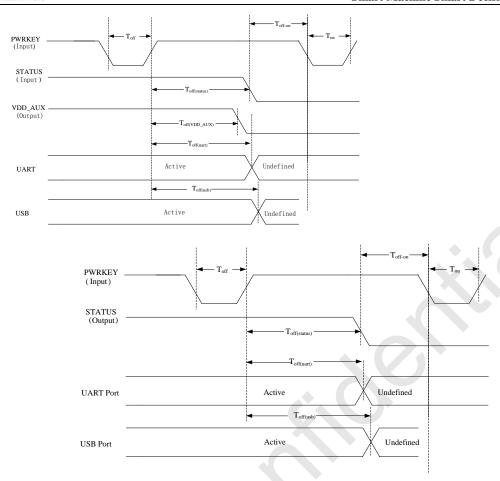


Figure 11: Power off timing sequence

Table 9: Power off timing and electronic characteristic

Ch al	Parameter		Time value			
Symbol			Typ.	Max.	Unit	
$T_{ m off}$	The active low level time pulse on PWRKEY pin to power off module	2.5			S	
$T_{\text{off(status)}}$	The time from power-off issue to STATUS pin output low level(indicating power off)*	25	26	-	S	
$T_{off(uart)}$	The time from power-off issue to UART port off	14	15	-	S	
T _{off(usb)}	The time from power-off issue to USB port off	27	28	-	S	
$T_{\text{off(VDD_AUX)}}$	The time from power-off issue to vdd_aux off	20	-	-	S	
T _{off-on}	The buffer time from power-off issue to power-on issue	0	-	-	S	

^{*}Note: The STATUS pin can be used to detect whether module is powered on or not. When module has been powered on and firmware goes ready, STATUS will be high level, or else STATUS will still low level.



3.2.3 Reset Function

Module can be reset by pulling the RESET pin down to ground.

Note: This function is only used as an emergency reset, when AT command "AT+CPOF" and the PWRKEY pin all have lost efficacy.

The RESET pin has been pulled up with a $40 \mathrm{K}\Omega$ resistor to $1.8 \mathrm{V}$ internally, so it does not need to be pulled up externally. It is strongly recommended to put a $100 \mathrm{nF}$ capacitor and an ESD protection diode close to the RESET pin. Please refer to the following figure for the recommended reference circuit.

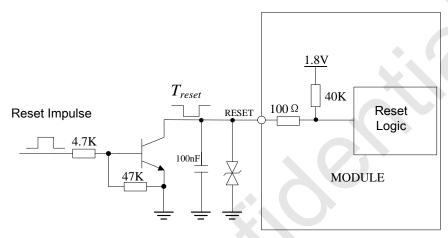


Figure 12: Reference reset circuit

Table 10: RESET pin electronic characteristic

Symbol	Description	Min.	Тур.	Max.	Unit
T _{reset}	The active low level time impulse on RESET pin to reset module	100	200	500	ms
V_{IH}	Input high level voltage	1.17	1.8	2.1	V
V_{IL}	Input low level voltage	-0.3	0	0.8	V

3.3 UART Interface

Module provides a 7-wire UART (universal asynchronous serial transmission) interface as DCE (Data Communication Equipment). AT commands and data transmission can be performed through UART interface.



3.3.1 UART Design Guide

The following figures show the reference design.

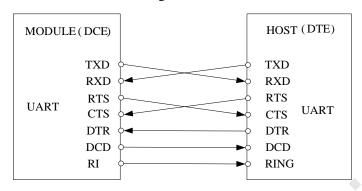


Figure 13: UART full modem

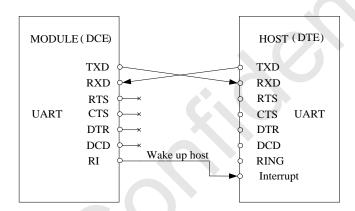


Figure 14: UART null modem

The module UART is 1.8V voltage interface. If user's UART application circuit is 3.3V voltage interface, the level shifter circuits should be used for voltage matching. The TXB0108RGYR provided by Texas Instruments is recommended. The following figure shows the voltage matching reference design.

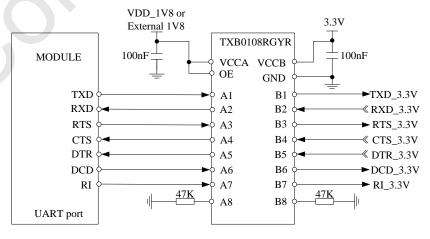


Figure 15: Reference circuit of level shift



customers can use another level shifter circuits as follow

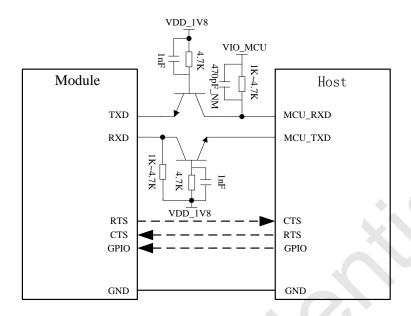


Figure 16: Level matching circuit with triode

Note1: User need to use high speed transistors such as MMBT3904.

Note2: module supports the following baud rates: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600, 3200000, 3686400, 4000000bps. The default band rate is 115200bps.

3.3.2 RI and DTR Behavior

The RI pin can be used to interrupt output signal to inform the host controller such as application CPU.

Normally RI will keep high level until certain conditions such as receiving SMS, or a URC report coming, and then it will change to low level.

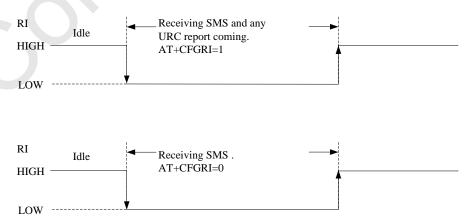


Figure 17: RI behaviour (SMS and URC report)



Normally RI will be kept at a high level until a voice call, then it will output periodic rectangular wave with 5900ms low level and 100ms high level. It will output this kind of periodic rectangular wave until the call is answered or hung up.

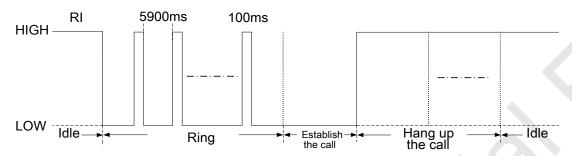


Figure 18: RI behaviour (voice call)

Note: For more details of AT commands about UART, please refer to document [1] and [22].

DTR pin can be used to wake module from sleep. When module enters sleep mode, pulling down DTR can wake module.

3.4 USB Interface

The module contains a USB interface compliant with the USB2.0 specification as a peripheral, but the USB charging function is not supported.

module can be used as a USB device. module supports the USB suspend and resume mechanism which can reduce power consumption. If there is no data transmission on the USB bus, module will enter suspend mode automatically, and will be resumed by some events such as voice call, receiving SMS, etc.

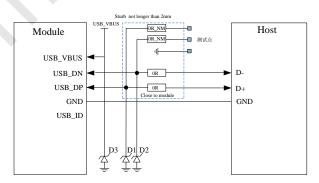


Figure 19: USB reference circuit

Because of the high bit rate on USB bus, more attention should be paid to the influence of the junction capacitance of the ESD component on USB data lines. Typically, the capacitance should be less than 1pF. It is recommended to use an ESD protection component such as ESD9L5.0ST5G provided by On Semiconductor (www.onsemi.com).



D3 is suggested to select the diode with anti-ESD and voltage surge function, or customer could add a ZENER diode for surge clamping. The recommend diodes please refer to table 7.

Note: The USB_DN and USB_DP nets must be traced by 900hm+/-10% differential impedance.

3.5 USIM Interface

module supports both 1.8V and 3.0V USIM Cards.

Table 11: USIM electronic characteristic in 1.8V mode (USIM_VDD=1.8V)

Symbol	Parameter	Min.	Typ.	Max.	Unit
USIM_ VDD	LDO power output voltage	1.75	1.8	1.95	V
V_{IH}	High-level input voltage	0.65*USIM_VDD	-	USIM_VDD +0.3	V
$V_{\rm IL}$	Low-level input voltage	-0.3	0	0.35*USIM_VDD	V
V_{OH}	High-level output voltage	USIM_VDD -0.45	-	USIM_VDD	V
V _{OL}	Low-level output voltage	0	0	0.45	V

Table 12: USIM electronic characteristic 3.0V mode (USIM_VDD=2.95V)

Symbol	Parameter	Min.	Typ.	Max.	Unit
USIM_ VDD	LDO power output voltage	2.75	2.95	3.05	V
V_{IH}	High-level input voltage	0.65*USIM_VDD	-	USIM_VDD +0.3	V
V_{IL}	Low-level input voltage	-0.3	0	0.25*USIM_VDD	V
V_{OH}	High-level output voltage	USIM_VDD -0.45	-	USIM_VDD	V
V _{OL}	Low-level output voltage	0	0	0.45	V

3.5.1 USIM Application Guide

It is recommended to use an ESD protection component such as ESDA6V1W5 produced by ST (www.st.com) or SMF15C produced by ON SEMI (www.onsemi.com). Note that the USIM peripheral circuit should be close to the USIM card socket. The following figure shows the 6-pin SIM card holder reference circuit.



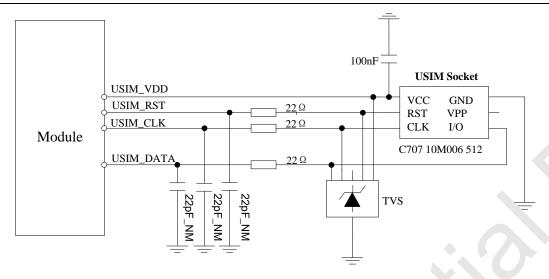


Figure 20: USIM interface reference circuit

Note: USIM_DATA has been pulled up with a 10K\Omega resistor to USIM_VDD in module. A 100nF capacitor on USIM_VDD is used to reduce interference. For more details of AT commands about USIM, please refer to document [1].USIM_CLK is very important signal, the rise time and fall time of USIM_CLK should be less than 40ns, otherwise the USIM card might not be initialized correctly.



Recommended USIM Card Holder

It is recommended to use the 6-pin USIM socket such as C707 10M006 512 produced by Amphenol. User can visit http://www.amphenol.com for more information about the holder.

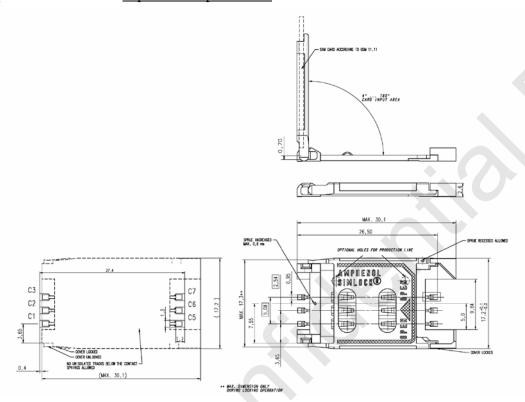


Figure 21: Amphenol SIM card socket

Table 13: Amphenol USIM socket pin description

Pin	Signal	Description
C1	USIM_VDD	USIM Card Power supply.
C2	USIM_RST	USIM Card Reset.
C3	USIM_CLK	USIM Card Clock.
C5	GND	Connect to GND.
C6	VPP	
C7	USIM_DATA	USIM Card data I/O.



3.6 PCM Interface

module provides a PCM interface for external codec, which can be used in master mode with short sync and 16 bits linear format.

Table 14: PCM format

Characteristics	Specification	
Line Interface Format	Linear(Fixed)	
Data length	16bits(Fixed)	
PCM Clock/Sync Source	Master Mode(Fixed)	. ()
PCM Clock Rate	2048kHz (2G/3G) , 4096Khz (4G)	
PCM Sync Format	Short sync(Fixed)	
Data Ordering	MSB	

Note: For more details about PCM AT commands, please refer to document [1].

3.6.1 PCM timing

module supports 2.048 MHz PCM data and sync timing for 16 bits linear format codec.

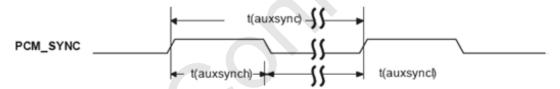


Figure 22: PCM_SYNC timing

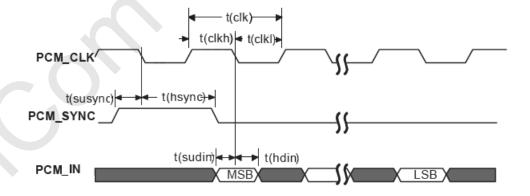


Figure 23: EXT codec to module timing



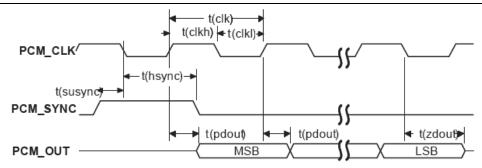


Figure 24: Module to EXT codec timing

Table 15: PCM timing parameters(2G/3G mode)

参数	描述	Min.	Тур.	Max.	Unit
T(sync)	PCM_SYNC cycle time	-	125	-	μs
T(synch)	PCM_SYNC high level time	-	488	-	ns
T(syncl)	PCM_SYNC low level time		124.5	-	μs
T(clk)	PCM_CLK cycle time		488	-	ns
T(clkh)	PCM_CLK high level time	-	244	-	ns
T(clkl)	PCM_CLK low level time	-	244	-	ns
T(susync)	PCM_SYNC setup time high before falling edge of PCM_CLK	-	244	-	ns
T(hsync)	PCM_SYNC hold time after falling edge of PCM_CLK	-	244	_	ns
T(sudin)	PCM_IN setup time before falling edge of PCM_CLK	60	-	-	ns
T(hdin)	PCM_IN hold time after falling edge of PCM_CLK	10	-	-	ns
T(pdout)	Delay from PCM_CLK rising to PCM_OUT valid	-	-	60	ns
T(zdout)	Delay from PCM_CLK falling to PCM_OUT HIGH-Z	_	160	-	ns

Table 16: PCM timing parameters(4G mode)

参数	描述	Min.	Typ.	Max.	Unit
T(sync)	PCM_SYNC cycle time	-	62.5	-	μs
T(synch)	PCM_SYNC high level time	_	244	_	ns
T(syncl)	PCM_SYNC low level time	_	62.256	_	μs
T(clk)	PCM_CLK cycle time	_	244	-	ns
T(clkh)	PCM_CLK high level time	_	122	_	ns
T(clkl)	PCM_CLK low level time	_	122	_	ns
T(susync)	PCM_SYNC setup time high before falling edge of PCM_CLK	_	122	-	ns
T(hsync)	PCM_SYNC hold time after falling edge of PCM_CLK	_	122	_	ns
T(sudin)	PCM_IN setup time before falling edge of PCM_CLK	122	_	_	ns
T(hdin)	PCM_IN hold time after falling edge of PCM_CLK	122	_	_	ns
T(pdout)	Delay from PCM_CLK rising to PCM_OUT valid	-	_	122	ns
T(zdout)	Delay from PCM_CLK falling to PCM_OUT HIGH-Z	-	-	122	ns



3.6.2 PCM Application Guide

The following figure shows the external codec reference design.

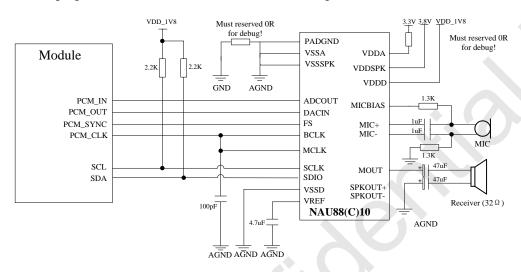


Figure 25: Audio codec reference circuit

3.7 SD Interface

module provides a 4-bit SD/MMC interface with clock rate up to 200 MHz, The voltage of MMC/SD interface is 2.85V, which is compatible with SDIO Card Specification (version 3.0) and Secure Digital (Physical Layer Specification, version 3.0). It supports up to 32GB SD cards.

Table 17: MMC/SD electronic characteristic (SD_DATA0-SD_DATA3 , SD_CLK and SD_CMD) \ast

Symbol	Parameter	Min.	Typ.	Max.	Unit
V_{IH}	High-level input voltage	0.65*2.85	-	2.85+0.3	V
$V_{\rm IL}$	Low-level input voltage	-0.3	0	0.25*2.85	V
V_{OH}	High-level output voltage	2.85-0.4	2.85	2.85	V
V _{OL}	Low-level output voltage	0	0	0.45	V

Note:

* SD_DET is 1.8V operation voltage ,which is different from SD_DATA0-SD_DATA3, SD_CLK or SD_CMD.

Customer should provide 2.85V for SD card and the current should more than 350mA. ESD/EMI components should be arranged beside SD card socket. Refer to the following application circuit.



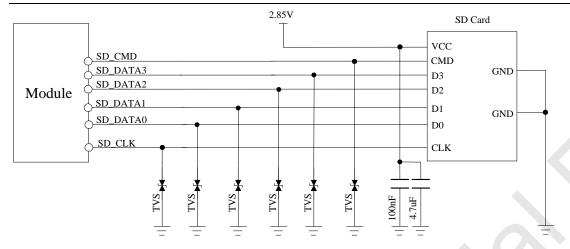


Figure 26: SD reference circuit

SD card layout guide lines:

- Protect other sensitive signals/circuits from SD card signals.
- Protect SD card signals from noisy signals (clocks, SMPS, etc.).
- Up to 200 MHz clock rate, 50 Ω nominal, $\pm 10\%$ trace impedance
- CLK to DATA/CMD length matching < 1 mm
- 15–24 Ω termination resistor on clock lines near module
- Total routing length < 50 mm recommended
- Routing distance from module clock pin to termination resistor < 5 mm
- Spacing to all other signals = 2x line width
- Bus capacitance < 15 pF

3.8 I2C Interface

module provides a I2C interface compatible with I2C specification, version 5.0, with clock rate up to 400 kbps. Its operation voltage is 1.8V.

The following figure shows the I2C bus reference design.

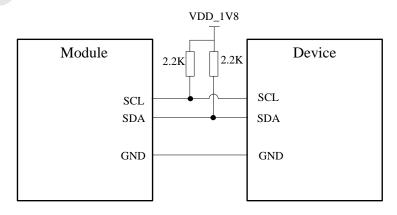


Figure 27: I2C reference circuit



Note: SDA and SCL do not have pull-up resistors in module. So, 2 external pull up resistors are needed in application circuit.

"AT+CRIIC and AT+CWIIC" AT commands could be used to read/write register values of the I2C peripheral devices. For more details about AT commands please refer to document [1].

3.9 SDIO Interface

Module provides a 4 bit 1.8V SDIO interface for WLAN solution with W58 module.

Note: Special software version for CAT4 modules support this function.

3.10 SPI Interface

module provides a SPI interface as a master only. Its operation voltage is 1.8V, and its clock rate is up to 26 MHz.

Note: This function is reserved. For detail information please contact with FAE.

3.11 Network status

The NETLIGHT pin is used to control Network Status LED, its reference circuit is shown in the following figure.

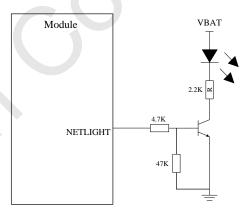


Figure 28: NETLIGHT reference circuit

Note: The value of the resistor named "R" depends on the LED characteristic.

Table 18: NETLIGHT pin status

NETLIGHT pin status	Module status
Always On	Searching Network; Call Connect(include VOLTE,SRLTE)
200ms ON, 200ms OFF	Data Transmit; 4G registered;
800ms ON, 800ms OFF	2G/3G registered network



OFF	Power off ;Sleep
OII	1 ower on ,bicep

Note: NETLIGHT output low level as "OFF", and high level as "ON".

3.12 Flight Mode Control

The FLIGHTMODE pin can be used to control module to enter or exit the Flight mode. In Flight mode, the RF circuit is closed to prevent interference with other equipments and minimize current consumption. Bidirectional ESD protection component is suggested to add on FLIGHTMODE pin, its reference circuit is shown in the following figure.

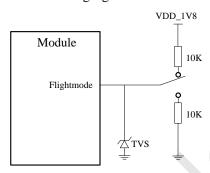


Figure 29: Flight mode switch reference circuit

Table 19: FLIGHTMODE pin status

FLIGHTMODE pin status	Module operation
Input Low Level	Flight Mode: RF is closed
Input High Level	AT+CFUN=0: RF is closed AT+CFUN=1:RF is working

3.13 Other interface

3.13.1 Sink Current Source

The ISINK pin is VBAT tolerant and intended to drive some passive devices, such as LCD backlight and white LED, etc. Its output current can be up to 40mA and be set by the AT command "AT+ CLEDITST".

Table 20: Sink current electronic characteristic

Symbol	Description	Min.	Тур.	Max.	Unit
$V_{\rm ISINK}$	Voltage tolerant	0.5	-	VBAT	V
I_{ISINK}	Current tolerant	0	-	40	mA



ISINK is a ground-referenced current sink. The following figure shows its reference circuit.

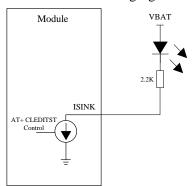


Figure 30: ISINK reference circuit

Note: The sinking current can be adjusted to meet the design requirement through the AT command "AT+ CLEDITST =<0>, <value>".The "value" ranges from 0 to 8, on behalf of the current from 0mA to 40mA by 5mA step.

3.13.2 ADC

module has 2 dedicated ADC pins named ADC1 and ADC2. They are available for digitizing analog signals such as battery voltage and so on. These electronic specifications are shown in the following table.

Table 21: ADC1 and ADC2 electronic characteristics

Characteristics	Min.	Typ.	Max.	Unit
Resolution	-	15	-	Bits
Conversion time	-	442	-	us
Input Range	0.1		1.7	V
Input serial resistance	1	_	-	ΜΩ

Note: "AT+CADC" and "AT+CADC2" can be used to read the voltage of the ADC1 and ADC2 pins, for more details, please refer to document [1].

3.13.3 LDO

Module has a LDO power output, named VDD_AUX. its output voltage is 2.85V by default, Users can switch the LDO on or off by the AT command "AT+CVAUXS" and configure its output voltage by the AT command "AT+CVAUXV".



Table 22: Electronic characteristic

Symbol	Description	Min.	Тур.	Max.	Unit
$V_{\mathrm{VDD_AUX}}$	Output voltage	1.7	2.85	3.05	V
I_{O}	Output current	-	-	150	mA

Note: For more details of AT commands about VDD_AUX, please refer to document [1].



4 RF Specifications

4.1 GSM/UMTS/LTE RF Specifications

Table 23: Conducted transmission power

Frequency	Power	Min.
GSM850	33dBm ±2dB	$5dBm \pm 5dB$
EGSM900	33dBm ±2dB	$5dBm \pm 5dB$
DCS1800	30dBm ±2dB	$0dBm \pm 5dB$
PCS1900	30dBm ±2dB	$0dBm \pm 5dB$
GSM850 (8-PSK)	27dBm ±3dB	$5dBm \pm 5dB$
EGSM900 (8-PSK)	27dBm ±3dB	$5dBm \pm 5dB$
DCS1800 (8-PSK)	26dBm +3/-4dB	0dBm ±5dB
PCS1900 (8-PSK)	26dBm +3/-4dB	0dBm ±5dB
WCDMA B1	24dBm +1/-3dB	<-50dBm
WCDMA B2	24dBm +1/-3dB	<-50dBm
WCDMA B5	24dBm +1/-3dB	<-50dBm
WCDMA B8	24dBm + 1/-3dB	<-50dBm
LTE-FDD B1	23dBm +/-2.7dB	<-40dBm
LTE-FDD B3	23dBm +/-2.7dB	<-40dBm
LTE-FDD B4	23dBm +/-2.7dB	<-40dBm
LTE-FDD B5	23dBm +/-2.7dB	<-40dBm
LTE-FDD B7	23dBm +/-2.7dB	<-40dBm
LTE-FDD B8	23dBm +/-2.7dB	<-40dBm
LTE-FDD B12	23dBm +/-2.7dB	<-40dBm
LTE-FDD B13	23dBm +/-2.7dB	<-40dBm
LTE-FDD B18	23dBm +/-2.7dB	<-40dBm
LTE-FDD B19	23dBm +/-2.7dB	<-40dBm
LTE-FDD B20	23dBm +/-2.7dB	<-40dBm
LTE-FDD B26	23dBm +/-2.7dB	<-40dBm
LTE-FDD B28	23dBm +/-2.7dB	<-40dBm
LTE-TDD B38	23dBm +/-2.7dB	<-40dBm
LTE-TDD B40	23dBm +/-2.7dB	<-40dBm
LTE-TDD B41	23dBm +/-2.7dB	<-40dBm

Table 24: Operating frequencies

Frequency	Receiving	Transmission
GSM850	869~894MHz	824~849 MHz
EGSM900	925~960MHz	880~915 MHz
DCS1800	1805∼1880 MHz	1710∼1785 MHz
PCS1900	1930~1990 MHz	1850~1910 MHz
WCDMA B1	2110~2170 MHz	1920~1980 MHz
WCDMA B2	1930~1990 MHz	1850~1910 MHz
WCDMA B5	869~894 MHz	824~849 MHz
WCDMA B8	925~960 MHz	880~915 MHz



The LTE Operating frequencies are shown in the following table 24.					
Note: Operating frequencies of LTE TDD B41 for the module is 100MHz BW, 2555~2655 MHz					
GPS	1574.4 ∼1576.44 MHz	-			
GLONASS	1598 ∼1606 MHz	-			
BD	1559 ∼1563 MHz				

Table 25: E-UTRA operating bands

E-UTRA	Uplink (UL) operating	Downlink (DL) operating	Duplex
Operating Band	band	band	Mode
1	1920 ~1980 MHz	2110 ~2170 MHz	FDD
2	1850~1910 MHz	1930~1990 MHz	FDD
3	1710 ~1785 MHz	1805 ~1880 MHz	FDD
4	1710~1755MHz	2110~2155MHz	FDD
5	824~849 MHz	869~894MHz	FDD
7	2500~2570MHz	2620~2690MHz	FDD
8	880 ~915 MHz	925 ~960 MHz	FDD
12	699~716MHz	728~746MHz	FDD
13	777~787MHz	746~757MHz	FDD
18	815~830MHz	860~875MHz	FDD
19	830~845MHz	875~890MHz	FDD
20	832~862MHz	791~ 821MHz	FDD
26	814~849MHz	859~894MHz	FDD
28	703~748MHz	758~803MHz	FDD
38	2570 ~2620 MHz	2570 ~2620 MHz	TDD
40	2300 ~2400 MHz	2300 ~2400 MHz	TDD
41	2496 ~2690 MHz	2496 ~2690 MHz	TDD

Note: Operating frequencies of LTE TDD B41 for the SIM7600X-PCIE is 100MHz BW, 2555 \sim 2655 MHz

Table 26: Conducted receive sensitivity

Frequency	Receive sensitivity(Typical)	Receive sensitivity(MAX)
GSM850	<-109dBm	3GPP
EGSM900	<-109dBm	3GPP
DCS1800	<-109dBm	3GPP
PCS1900	<-109dBm	3GPP
WCDMA B1	<-110dBm	3GPP
WCDMA B2	<-110dBm	3GPP
WCDMA B5	< -110dBm	3GPP
WCDMA B8	< -110dBm	3GPP



LTE FDD/TDD See table 26. 3GPP

Table 27: Reference sensitivity (QPSK)

E-UTR	1.4 MHz	3 MHz	5 MHz	10 MHz	5 MHz Test	15 MHz	20 MHz	Duplex
A band	Standard	Standard	Standard	Standard	Resort	Standard	Standard	Mode
1	-	-	-100	-97	-101	-95.2	-94	FDD
2	-102.7	-99.7	-98	-95	-99	-93.2	-92	FDD
3	-101.7	-98.7	-97	-94	-99	-92.2	-91	FDD
4	-104.7	-101.7	-100	-97	-101	-95.2	-94	FDD
5	-103.2	-100.2	-98	-95	-99			FDD
7			-98	-95	-97	-93.2	-92	FDD
8	-102.2	-99.2	-97	-94	-102			FDD
12	-101.7	-98.7	-97	-94	-99			FDD
13			-97	-94	-99			FDD
18			-100	-97	-101	-95.2		FDD
19			-100	-97	-101	-95.2		FDD
20			-97	-94	-98	-91.2	-90	FDD
26	-102.7	-99.7	-97.5	-94.5	-99	-92.7		FDD
28		-100.2	-98.5	-95.5	-99	-93.7	-91	FDD
38	-	-	-100	-97	-101	-95.2	-94	TDD
40	-	-	-100	-97	-101	-95.2	-94	TDD
41	-	-	-99	-96	-101	-94.2	-93	TDD

4.2 GSM /UMTS/LTE Antenna Design Guide

Users should connect antennas to module's antenna pads through micro-strip line or other types of RF trace and the trace impedance must be controlled in 50Ω . SIMCom recommends that the total insertion loss between the antenna pads and antennas should meet the following requirements:

Table 28: Trace loss

Frequency	Loss
700MHz-960MHz	<0.5dB
1710MHz-2170MHz	<0.9dB
2300MHz-2650MHz	<1.2dB

To facilitate the antenna tuning and certification test, a RF connector and an antenna matching circuit should be added. The following figure is the recommended circuit.



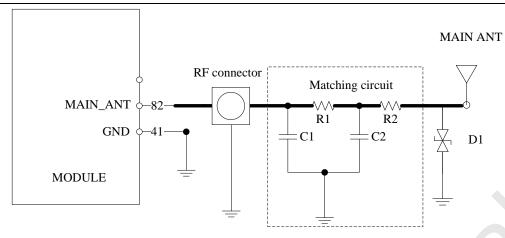


Figure 31: Antenna matching circuit (MAIN_ANT)

In above figure, the components R1, C1, C2 and R2 are used for antenna matching, the values of components can only be achieved after the antenna tuning and usually provided by antenna vendor. By default, the R1, R2 are $0\,\Omega$ resistors, and the C1, C2 are reserved for tuning. The component D1 is a TVS for ESD protection, and it is optional for users according to application environment. The RF test connector is used for the conducted RF performance test, and should be placed as close as to the module's MAIN_ANT pin. The traces impedance between module and antenna must be controlled in $50\,\Omega$.

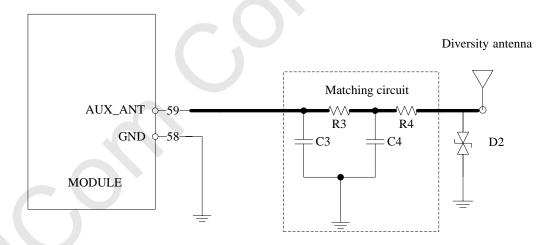


Figure 32: Antenna matching circuit (AUX_ANT)

In above figure, R3, C3, C4 and R4 are used for auxiliary antenna matching. By default, the R3, R4 are 0^{Ω} resistors, and the C3, C4 are reserved for tuning. D2 is a TVS for ESD protection, and it is optional for users according to application environment.

Two TVS are recommended in the table below.



Table 29: Recommended TVS

Package	Part Number	Vender
0201	LXES03AAA1-154	Murata
0402	LXES15AAA1-153	Murata

Note: SIMCom suggests the LTE auxiliary antenna to be kept on, since there are many high bands in the designing of LTE-TDD, such as band38, band40 and band41. Because of the high insert loss of the RF cable and layout lines, the receiver sensitivity of these bands above will have risk to meet the authentication without the diversity antenna. For more details about auxiliary antenna design notice, please refer to document [25].

4.3 GNSS

module merges GNSS (GPS/GLONASS/BD) satellite and network information to provide a high-availability solution that offers industry-leading accuracy and performance. This solution performs well, even in very challenging environmental conditions where conventional GNSS receivers fail, and provides a platform to enable wireless operators to address both location-based services and emergency mandates.

4.3.1 GNSS Technical specification

- Tracking sensitivity: -159 dBm (GPS) /-158 dBm (GLONASS) /-159 dBm (BD)
- Cold-start sensitivity: -148 dBm
- Accuracy (Open Sky): 2.5m (CEP50)
- TTFF (Open Sky): Hot start <1s, Cold start <35s
- Receiver Type: 16-channel, C/A Code
 GPS L1 Frequency: 1575.42±1.023MHz
- GLONASS: 1597.5~1605.8 MHz
- BD: 1559.05~1563.14 MHz
- Update rate: Default 1 Hz
- GNSS data format: NMEA-0183
- GNSS Current consumption : 100mA (GSM/UMTS/LTE Sleep ,in total on VBAT pins)
- GNSS antenna: Passive/Active antenna

Note: If the antenna is active type, the power should be given by main board because there is no power supply on the GPS antenna pad. If the antenna is passive, it is suggested that the external LNA should be used.

4.3.2 GNSS Application Guide

Users can adopt an active antenna or a passive antenna to module. If using a passive antenna, an external LNA is a must to get better performance.

The following figures are the reference circuits.



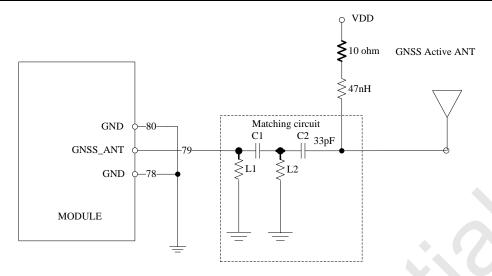


Figure 33: Active antenna circuit

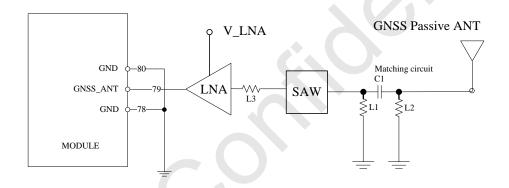


Figure 34: Passive antenna circuit (Default)

In above figures, the components C1, L1 and L2 are used for antenna matching. Usually, the values of the components can only be achieved after antenna tuning and usually provided by antenna vendor. C2 is used for DC blocking. L3 is the matching component of the external LNA, and the value of L3 is determined by the LNA characteristic and PCB layout. Both VDD of active antenna and V_LNA need external power supplies which should be considered according to active antenna and LNA characteristic. LDO/DCDC is recommended to get lower current consuming by shutting down active antennas and LNA when GNSS is not working.

GNSS can be tested by NMEA port. NMEA sentences can be obtained through UART or USB automatically. NMEA sentences include GSV, GGA, RMC, GSA, and VTG. Before using GNSS, user should configure module in proper operating mode by AT command. Please refer to related documents for details. module can also get position location information through AT directly.

Note: GNSS is closed by default and can be started by AT+CGPS. The AT command has two parameters, the first is on/off, and the second is GNSS mode. Default mode is standalone mode. AGPS mode needs more support from the mobile telecommunication network. Please refer to document [24] for more details.



5 Electrical Specifications

5.1 Absolute maximum ratings

Absolute maximum rating for digital and analog pins of module are listed in the following table:

Table 30: Absolute maximum ratings

Parameter	Min.	Typ.	Max.	Unit
Voltage at VBAT	-0.5	-	4.7	V
Voltage at USB_VBUS	-0.5	-	5.85	V
Voltage at digital pins (RESET,SPI,Keypad,GPIO,I2C,UART,PCM)	-0.3	-	2.1	V
Voltage at digital pins (SD,USIM)	-0.3		3.05	V
Voltage at PWRKEY	-0.3		1.8	

5.2 Operating conditions

Table 31: Recommended operating ratings

Parameter	Min.	Typ.	Max.	Unit
Voltage at VBAT	3.4	3.8	4.2	V
Voltage at USB_VBUS	3.0	5.0	5.25	V

Table 32: 1.8V Digital I/O characteristics*

Parameter	Description	Min.	Typ.	Max.	Unit
V_{IH}	High-level input voltage	1.17	1.8	2.1	V
V _{IL}	Low-level input voltage	-0.3	0	0.63	V
V_{OH}	High-level output voltage	1.35	-	1.8	V
V _{OL}	Low-level output voltage	0	-	0.45	V
I_{OH}	High-level output current(no pull down resistor)	-	2	-	mA
I_{OL}	Low-level output current(no pull up resistor)	-	-2	-	mA
I_{IH}	Input high leakage current (no pull down resistor)	-	-	1	uA
$I_{\rm IL}$	Input low leakage current(no pull up resistor)	-1	-	-	uA



*Note: These parameters are for digital interface pins, such as SPI, GPIOs (NETLIGHT, FLIGHTMODE, STATUS, USIM_DET, SD_DET), SDIO, I2C, UART, PCM, COEXn, and BOOT_CFG0.

The operating temperature of module is listed in the following table.

Table 33: Operating temperature

Parameter	Min.	Typ.	Max.	Unit
Normal operation temperature	-30	25	80	$^{\circ}$
Extended operation temperature*	-40	25	85	$^{\circ}$
Storage temperature	-45	25	+90	°C

*Note: Module is able to make and receive voice calls, data calls, SMS and make GSM/UMTX/LTE traffic in -40°C $\sim +85$ °C. The performance will be reduced slightly from the 3GPP specifications if the temperature is outside the normal operating temperature range and still within the extreme operating temperature range.

5.3 Operating Mode

5.3.1 Operating Mode Definition

The table below summarizes the various operating modes of module product.

Table 34: Operating mode Definition

Mode		Function
GSM /UMTS/LTE Sleep		In this case, the current consumption of module will be reduced to the minimal level and the module can still receive paging message and SMS.
п	GSM/UMTS/LTE Idle	Software is active. Module is registered to the network, and the module is ready to communicate.
Normal operation	GSM/UMTS/LTE Talk	Connection between two subscribers is in progress. In this case, the power consumption depends on network settings such as DTX off/on, FR/EFR/HR, hopping sequences, and antenna.
Norn	GPRS/EDGE/ UMTS/LTE Standby	Module is ready for data transmission, but no data is currently sent or received. In this case, power consumption depends on network settings.
	GPRS/EDGE/ UMTS/LTE Data transmission	There is data transmission in progress. In this case, power consumption is related to network settings (e.g. power control level); uplink/downlink data rates, etc.
Minimum functionality mode		AT command "AT+CFUN=0" AT+CSCLK=1 can be used to set the module to a minimum functionality mode without removing the power supply. In this mode, the RF part of the module will not work and the USIM card will not be accessible, but the serial port and USB



	port are still accessible. The power consumption in this mode is lower than normal mode.
Flight mode	AT command "AT+CFUN=4" or pulling down the FLIGHTMODE pin can be used to set the module to flight mode without removing the power supply. In this mode, the RF part of the module will not work, but the serial port and USB port are still accessible. The power consumption in this mode is lower than normal mode.
Power off	Module will go into power off mode by sending the AT command "AT+CPOF" or pull down the PWRKEY pin, normally. In this mode the power management unit shuts down the power supply, and software is not active. The serial port and USB are is not accessible.

5.3.2 Sleep mode

In sleep mode, the current consumption of module will be reduced to the minimal level, and module can still receive paging message and SMS.

Several hardware and software conditions must be satisfied together in order to let module enter into sleep mode:

- 1. UART condition
- 2. USB condition
- 3. Software condition

Note: Before designing, pay attention to how to realize sleeping/waking function and refer to Document [26] for more details.

5.3.3 Minimum functionality mode and Flight mode

Minimum functionality mode ceases a majority function of module, thus minimizing the power consumption. This mode is set by the AT command which provides a choice of the functionality levels.

- AT+CFUN=0: Minimum functionality
- AT+CFUN=1: Full functionality (Default)
- AT+CFUN=4: Flight mode

If module has been set to minimum functionality mode, the RF function and USIM card function will be closed. In this case, the serial port and USB are still accessible, but RF function and USIM card will be unavailable.

If module has been set to flight mode, the RF function will be closed. In this case, the serial port and USB are still accessible, but RF function will be unavailable.

When module is in minimum functionality or flight mode, it can return to full functionality by the AT command "AT+CFUN=1".



5.4 Current Consumption

The current consumption is listed in the table below.

Table 35: Current consumption on VBAT Pins (VBAT=3.8V)

GNSS			
GNSS supply current	© 140JD Turking Therical 25 A		
(AT+CFUN=0,without USB connection)	@ -140dBm, Tracking Typical:35mA		
GSM sleep/idle mode			
GSM/GPRS supply current	Sleep mode@ BS_PA_MFRMS=2 Typical: 2.8mA		
(GNSS off, without USB connection)	Idle mode@ BS_PA_MFRMS=2 Typical: 18mA		
UMTS sleep/idle mode			
WCDMA supply current	Sleep mode @DRX=9 Typical: 3.3mA		
(GNSS off, without USB connection)	Idle mode @DRX=9 Typical: 17.5mA		
LTE sleep/idle mode			
LTE supply current	Sleep mode Typical: 2.3mA		
(GNSS off, without USB connection)	Idle mode Typical: 17.5mA		
EVDO supply current	Sleep mode Typical: 2.0mA		
(GNSS off, without USB connection)	Idle mode Typical: 17.8mA		
GSM Talk	Tale mode Typical. 17.0m2		
GSM850	@power level #5 Typical: 220mA		
EGSM900	@ power level #5 Typical: 230mA		
DCS1800	@power level #5 Typical: 162mA		
PCS1900	@power level #5 Typical: 190mA		
UMTS Talk			
WCDMA B1	@Power 24dBm Typical: 540mA		
WCDMA B2	@Power 24dBm Typical: 470mA		
WCDMA B5	@Power 24dBm Typical: 530mA		
WCDMA B8	@Power 24dBm Typical: 385mA		
GPRS			
GSM850(1 Rx,4 Tx)	@power level #5 Typical: 480mA		
EGSM900(1 Rx,4 Tx)	@power level #5 Typical: 230mA		
DCS1800(1 Rx,4 Tx)	@power level #0 Typical: 195mA		
PCS1900(1 Rx,4 Tx)	@power level #0 Typical: 390mA		
GSM850(3Rx, 2 Tx)	@power level #5 Typical: 330mA		
EGSM900(3Rx, 2 Tx)	@power level #5 Typical: 370mA		
DCS1800(3Rx, 2 Tx)	@power level #0 Typical: 275mA		
PCS1900(3Rx, 2 Tx)	@power level #0 Typical: 245mA		
EDGE			
GSM850(1 Rx,4 Tx)	@power level #8 Typical: 340mA		
EGSM900(1 Rx,4 Tx)	@power level #8 Typical: 400mA		
DCS1800(1 Rx,4 Tx)	@power level #2 Typical: 300mA		
PCS1900(1 Rx,4 Tx)	@power level #2 Typical: 330mA		
GSM850(3Rx, 2 Tx)	@power level #8 Typical: 280mA		



Smart Machine Smart Decision

a SJSEA AUTCompanyi	Smart Machine Smart Decision		
EGSM900(3Rx, 2 Tx)	@power level #8 Typical: 320mA		
DCS1800(3Rx, 2 Tx)	@power level #2 Typics	al: 230mA	
PCS1900(3Rx, 2 Tx)	@power level #2 Typics	al: 268mA	
HSDPA data			
WCDMA B1	@Power 24dBm	Typical: 478mA	
WCDMA B2	@Power 23dBm	Typical: 475mA	
WCDMA B5	@Power 24dBm	Typical: 480mA	
WCDMA B8	@Power 24dBm	Typical: 430mA	
LTE data	er ower 24dDin	Typical. 430mA	
LIE data	@5Mbps 22.3dBm	Typical: 577mA	
LTE-FDD B1	@10Mbps 22.4dBm	Typical: 590mA	
	@20Mbps 22.4dBm	Typical: 630mA	
	@5Mbps 22.1dBm	Typical: 515mA	
LTE-FDD B2	@10Mbps 22.4dBm	Typical: 544mA	
	@20Mbps 22.3dBm	Typical:575mA	
	@5Mbps 22.2dBm	Typical: 479mA	
LTE-FDD B3	@10Mbps 22.1dBm	Typical: 498mA	
	@20Mbps 22.1dBm	Typical: 530mA	
THE EDD DA	@5Mbps 22.0dBm	Typical: 527mA	
LTE-FDD B4	@10Mbps 22.1dBm @20Mbps 22.6dBm	Typical: 559mA	
	-	Typical: 555mA	
LTE-FDD B5	@5Mbps 22.2dBm @10Mbps 22.1dBm	Typical: 610mA Typical: 600mA	
LIE-IDD B3	@20Mbps 22.1dBm	Typical: 630mA	
	@5Mbps 22.2dBm	Typical: 650mA	
LTE-FDD B7	@10Mbps 22.1dBm	Typical: 650mA	
	@20Mbps 22.1dBm	Typical: 630mA	
LTE-FDD B8	@5Mbps 22.8dBm	Typical: 644mA	
LIE-I-DD B8	@10Mbps 22.8dBm	Typical: 646mA	
LTE-FDD B12	@5Mbps 22.7dBm	Typical: 493mA	
	@10Mbps 22.7dBm	Typical: 510mA	
LTE-FDD B13	@5Mbps 21.9dBm	Typical: 505mA	
	@10Mbps 22.0dBm @5Mbps 21.3dBm	Typical: 497mA	
LTE-FDD B18	@5Mbps 21.3dBm @10Mbps 22.5dBm	Typical: 531mA Typical: 523mA	
LIL-IDD BIO	@15Mbps 22.6dBm	Typical: 570mA	
	@5Mbps 22.4dBm	Typical: 532mA	
LTE-FDD B19	@10Mbps 22.3dBm	Typical: 541mA	
	@15Mbps 22.5dBm	Typical: 590mA	
	@5Mbps 21.8dBm	Typical: 579mA	
LTE-FDD B20	@10Mbps 21.8dBm	Typical: 590mA	
	@20Mbps 21.8dBm	Typical: 600mA	
	@5Mbps 22.4dBm	Typical: 525mA	
LTE-FDD B26	@10Mbps 22.7dBm	Typical: 570mA	
	@15Mbps 22.3dBm	Typical: 580mA	
LTE-FDD B28	@5Mbps 22.4dBm @10Mbps 22.5dBm	Typical: 612mA Typical: 510mA	
	@20Mbps 22.4dBm	Typical: 670mA	
	@5Mbps 21.8dBm	Typical: 370mA	
LTE-TDD B38	@10Mbps 21.8dBm	Typical: 380mA	
	@20Mbps 21.8dBm	Typical: 403mA	
LTE-TDD B40	@5Mbps 21.5dBm	Typical: 407mA	
LIE-IDD D40	@10Mbps 21.7dBm	Typical: 416mA	



Smart Machine Smart Decision

	@20Mbps	21.7dBm	Typical: 444mA
LTE-TDD B41	@5Mbps @10Mbps		Typical: 390mA Typical: 396mA
	@20Mbps		Typical: 420mA

5.5 ESD Notes

module is sensitive to ESD in the process of storage, transporting, and assembling. When module is mounted on the users' mother board, the ESD components should be placed beside the connectors which human body may touch, such as USIM card holder, audio jacks, switches, keys, etc. The following table shows the module ESD measurement performance without any external ESD component.

Table 36: The ESD performance measurement table (Temperature: 25°C, Humidity: 45%)

Part	Contact discharge	Air discharge
VBAT,GND	+/-6K	+/-12K
Antenna port	+/-5K	+/-10K
USB	+/-4K	+/-8K
UART	+/-3K	+/-6K
Other PADs	+/-3K	+/-6K



6 SMT Production Guide

6.1 Top and Bottom View of module



Figure 35: Top and bottom view of module

6.2 Label Information



Figure 36: Label information



Table 37: The description of label information

No.	Description	
A	LOGO	
В	Module part number	
С	Project name	
D	Serial number	
Е	International mobile equipment identity	+ (2)
F	QR code	X

6.3 Typical SMT Reflow Profile

SIMCom provides a typical soldering profile. Therefore the soldering profile shown below is only a generic recommendation and should be adjusted to the specific application and manufacturing constraints.

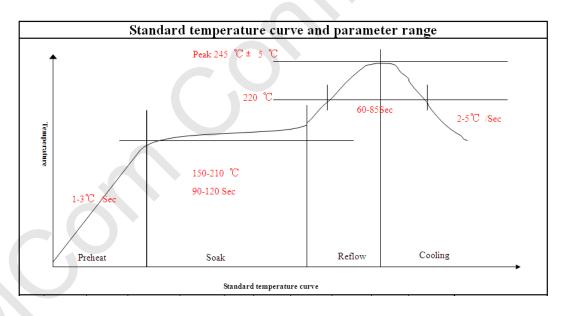


Figure 37: The ramp-soak-spike reflow profile of module

Note: For more details about secondary SMT, please refer to the document [21].

6.4 Moisture Sensitivity Level (MSL)

module is qualified to Moisture Sensitivity Level (MSL) 3 in accordance with JEDEC J-STD-033. If the prescribed time limit is exceeded, users should bake module for 192 hours in drying equipment (<5% RH) at 40+5/-0°C, or 72 hours at 85+5/-5°C. Note that plastic tray is not SIM7600 Series _Hardware Design _V1.03 54 2019-4-30



heat-resistant, and only can be baked at 45° C.

Table 38: Moisture Sensitivity Level and Floor Life

Moisture Sensitivity Level (MSL)	Floor Life (out of bag) at factory ambient≤30°C/60% RH or as stated
1	Unlimited at ≤30°C/85% RH
2	1 year
2a	4 weeks
3	168 hours
4	72 hours
5	48 hours
5a	24 hours
6	Mandatory bake before use. After bake, it must be reflowed within the time limit specified on the label.

NOTE: IPC / JEDEC J-STD-033 standard must be followed for production and storage.

6.5 Stencil Foil Design Recommendation

The recommended thickness of stencil foil is more than 0.15mm.



7 Packaging

module support tray packaging.

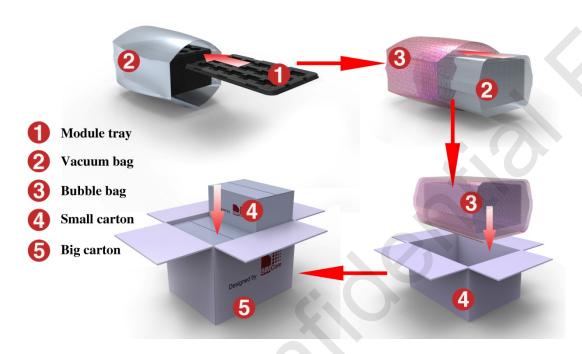


Figure 38: packaging diagram

Module tray drawing:

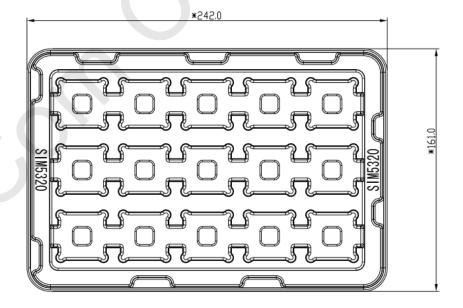


Figure 39: Tray drawing



Table 39: Tray size

Length (±3mm)	Width (±3mm)	Number
242.0	161.0	15

Small carton drawing:

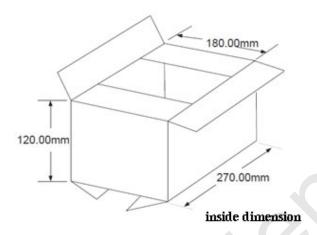


Figure 40: Small carton drawing

Table 40: Small Carton size

Length (±10mm)	Width (±10mm)	Height (±10mm)	Number
270	180	120	15*20=300

Big carton drawing:

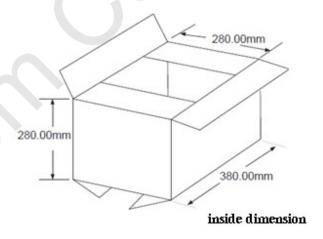


Figure 41: Big carton drawing

Table 41: Big Carton size

Length (±10mm)	Width (±10mm)	Height (±10mm)	Number



380 280 280 300*4=1200

Appendix

A. Reference Design

Refer to < SIM7600 Reference Design V1.X.pdf > for the details.

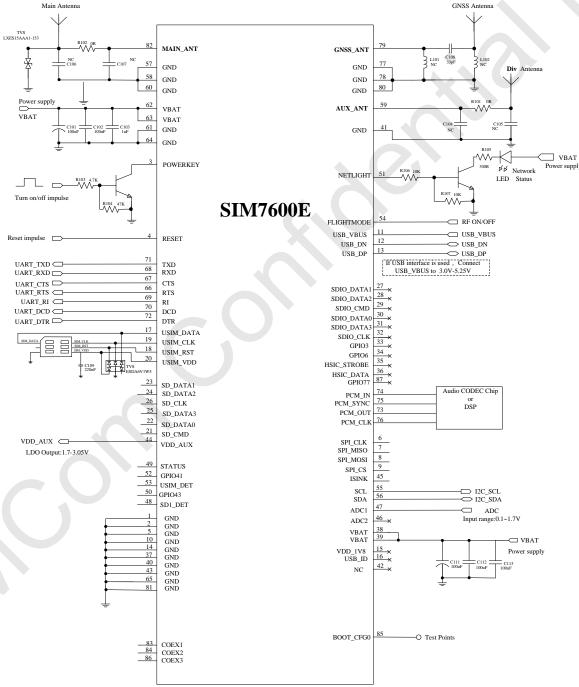


Figure 42: Reference design



B. Coding Schemes and Maximum Net Data Rates over Air Interface

Table 42: Coding Schemes and Maximum Net Data Rates over Air Interface

Multislot definition(GPRS/EDGE)			
Slot class	DL slot number	UL slot number	Active slot number
1	1	1	2
2	2	1	3
3	2	2	3
4	3	1	4
5	2	2 2	4
<u>6</u> 7	3	3	4
8	4	1	5
9	3	2	5
10	4	2	5
11	4	3	5
12	4	4	5
GPRS coding scheme	Max data rata (4	slots)	Modulation type
CS $1 = 9.05 \text{ kb/s} / \text{time slot}$	36.2 kb/s		GMSK
CS $2 = 13.4 \text{ kb/s} / \text{time slot}$	53.6 kb/s		GMSK
CS $3 = 15.6 \text{ kb/s} / \text{time slot}$	62.4 kb/s		GMSK
CS 4 = 21.4 kb/s / time slot	85.6 kb/s		GMSK
EDGE coding scheme	Max data rata (4	slots)	Modulation type
MCS $1 = 8.8 \text{ kb/s/time slot}$	35.2 kb/s		GMSK
MCS $2 = 11.2 \text{ kb/s/time slot}$	44.8 kb/s		GMSK
MCS $3 = 14.8 \text{ kb/s/time slot}$	59.2 kb/s		GMSK
MCS $4 = 17.6 \text{ kb/s/time slot}$	70.4 kb/s		GMSK
MCS $5 = 22.4 \text{ kb/s/time slot}$	89.6 kb/s		8PSK
MCS $6 = 29.6 \text{ kb/s/time slot}$	118.4 kb/s		8PSK
MCS $7 = 44.8 \text{ kb/s/time slot}$	179.2 kb/s		8PSK
MCS $8 = 54.4 \text{ kb/s/time slot}$	217.6 kb/s		8PSK
MCS $9 = 59.2$ kb/s/ time slot	236.8 kb/s		8PSK
HSDPA device category	Max data rate (pe	eak)	Modulation type
Category 1	1.2Mbps		16QAM,QPSK
Category 2	1.2Mbps		16QAM,QPSK
Category 3	1.8Mbps		16QAM,QPSK
Category 4	1.8Mbps		16QAM,QPSK
Category 5	3.6Mbps		16QAM,QPSK
Category 6	3.6Mbps		16QAM,QPSK
Category 7	7.2Mbps		16QAM,QPSK
Category 8	7.2Mbps		16QAM,QPSK



Smart Machine Smart Decision

a SUSEA AUT company	Smart Machii	ie Smart Decision
Category 9	10.2Mbps	16QAM,QPSK
Category 10	14.4Mbps	16QAM,QPSK
Category 11	0.9Mbps	QPSK
Category 12	1.8Mbps	QPSK
Category 13	17.6Mbps	64QAM
Category 14	21.1Mbps	64QAM
Category 15	23.4Mbps	16QAM
Category 16	28Mbps	16QAM
Category 17	23.4Mbps	64QAM
Category 18	28Mbps	64QAM
Category 19	35.5Mbps	64QAM
Category 20	42Mbps	64QAM
Category 21	23.4Mbps	16QAM
Category 22	28Mbps	16QAM
Category 23	35.5Mbps	64QAM
Category 24	42.2Mbps	64QAM
HSUPA device category	Max data rate (peak)	Modulation type
Category 1	0.96Mbps	QPSK
Category 2	1.92Mbps	QPSK
Category 3	1.92Mbps	QPSK
Category 4	3.84Mbps	QPSK
Category 5	3.84Mbps	QPSK
Category 6	5.76Mbps	QPSK
LTE-FDD device category (Downlink)	Max data rate (peak)	Modulation type
Category 1	10Mbps	QPSK/16QAM/64QAM
Category 2	50Mbps	QPSK/16QAM/64QAM
Category 3	100Mbps	QPSK/16QAM/64QAM
Category 4	150Mbps	QPSK/16QAM/64QAM
LTE-FDD device category (Uplink)	Max data rate (peak)	Modulation type
Category 1	5Mbps	QPSK/16QAM
Category 2	25Mbps	QPSK/16QAM
Category 3	50Mbps	QPSK/16QAM
Category 4	50Mbps	QPSK/16QAM



C. Related Documents

Table 43: Related Documents

NO.	Title	Description
[1]	SIM7500_SIM7600 Series_AT Command Manual_V1.xx	AT Command Manual
[2]	ITU-T Draft new recommendationV.25ter	Serial asynchronous automatic dialing and control
[3]	GSM 07.07	Digital cellular telecommunications (Phase 2+); AT command set for GSM Mobile Equipment (ME)
[4]	GSM 07.10	Support GSM 07.10 multiplexing protocol
[5]	GSM 07.05	Digital cellular telecommunications (Phase 2+); Use of Data Terminal Equipment – Data Circuit terminating Equipment (DTE – DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS)
[6]	GSM 11.14	Digital cellular telecommunications system (Phase 2+); Specification of the SIM Application Toolkit for the Subscriber Identity Module – Mobile Equipment (SIM – ME) interface
[7]	GSM 11.11	Digital cellular telecommunications system (Phase 2+); Specification of the Subscriber Identity Module – Mobile Equipment (SIM – ME) interface
[8]	GSM 03.38	Digital cellular telecommunications system (Phase 2+); Alphabets and language-specific information
[9]	GSM 11.10	Digital cellular telecommunications system (Phase 2); Mobile Station (MS) conformance specification; Part 1: Conformance specification
[10]	3GPP TS 51.010-1	Digital cellular telecommunications system (Release 5); Mobile Station (MS) conformance specification
[11]	3GPP TS 34.124	Electromagnetic Compatibility (EMC) for mobile terminals and ancillary equipment.
[12]	3GPP TS 34.121	Electromagnetic Compatibility (EMC) for mobile terminals and ancillary equipment.
[13]	3GPP TS 34.123-1	Technical Specification Group Radio Access Network; Terminal conformance specification; Radio transmission and reception (FDD)
[14]	3GPP TS 34.123-3	User Equipment (UE) conformance specification; Part 3: Abstract Test Suites.
[15]	EN 301 908-02 V2.2.1	Electromagnetic compatibility and Radio spectrum Matters (ERM); Base Stations (BS) and User Equipment (UE) for IMT-2000. Third Generation cellular networks; Part 2: Harmonized EN for IMT-2000, CDMA Direct Spread (UTRA FDD) (UE) covering essential requirements of article 3.2 of the R&TTE Directive
[16]	EN 301 489-24 V1.2.1	Electromagnetic compatibility and Radio Spectrum Matters (ERM); Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 24: Specific conditions for IMT-2000 CDMA Direct Spread (UTRA) for Mobile and portable (UE) radio and ancillary equipment
[17]	IEC/EN60950-1(2001)	Safety of information technology equipment (2000)



Smart Machine Smart Decision

[18]	3GPP TS 51.010-1	Digital cellular telecommunications system (Release 5); Mobile Station (MS) conformance specification
[19]	GCF-CC V3.23.1	Global Certification Forum - Certification Criteria
[20]	2002/95/EC	Directive of the European Parliament and of the Council of 27 January 2003 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)
[21]	Module secondary-SMT-UGD-V1.xx	Module secondary SMT Guidelines
[22]	SIM7X00 Series_UART_Application Note_V1.xx	This document describes how to use UART interface of SIMCom modules.
[23]	SIM7100_SIM7500_SIM7600 Series_USB AUDIO_Application Note_V1.xx	USB AUDIO Application Note
[24]	SIM7X00 Series_GPS_Application Note_V1.xx	GPS Application Note
[25]	Antenna design guidelines for diversity receiver system	Antenna design guidelines for diversity receiver system
[26]	SIM7100_SIM7500_SIM7600 _Sleep Mode_Application Note_V1.xx	Sleep Mode Application Note
[27]	7600CE-LAN-Reference Design V1.0	HSIC Application Note



D. Terms and Abbreviations

Table 44: Terms and Abbreviations

Abbreviation	Description
ADC	Analog-to-Digital Converter
ARP	Antenna Reference Point
BER	Bit Error Rate
BTS	Base Transceiver Station
CS	Coding Scheme
CSD	Circuit Switched Data
CTS	Clear to Send
DAC	Digital-to-Analog Converter
DRX	Discontinuous Reception
DSP	Digital Signal Processor
DTE	Data Terminal Equipment (typically computer, terminal, printer)
DTR	Data Terminal Ready
DTX	Discontinuous Transmission
EFR	Enhanced Full Rate
EGSM	Enhanced GSM
EMC	Electromagnetic Compatibility
ESD	Electrostatic Discharge
ETS	European Telecommunication Standard
EVDO	Evolution Data Only
FCC	Federal Communications Commission (U.S.)
FD	SIM fix dialing phonebook
FDMA	Frequency Division Multiple Access
FR	Full Rate
GMSK	Gaussian Minimum Shift Keying
GNSS	Global Navigation Satellite System
GPRS	General Packet Radio Service
GPS	Global Positioning System
GSM	Global Standard for Mobile Communications
HR	Half Rate
HSPA	High Speed Packet Access
I2C	Inter-Integrated Circuit
IMEI	International Mobile Equipment Identity
LTE	Long Term Evolution
MO	Mobile Originated
MS	Mobile Station (GSM engine), also referred to as TE
MT	Mobile Terminated
NMEA	National Marine Electronics Association
PAP	Password Authentication Protocol
PBCCH	Packet Switched Broadcast Control Channel
PCB	Printed Circuit Board
PCS	Personal Communication System, also referred to as GSM 1900



Smart Machine Smart Decision

RF	Radio Frequency
RMS	Root Mean Square (value)
RTC	Real Time Clock
SIM	Subscriber Identification Module
SMS	Short Message Service
SPI	serial peripheral interface
SMPS	Switched-mode power supply
TDMA	Time Division Multiple Access
TE	Terminal Equipment, also referred to as DTE
TX	Transmit Direction
UART	Universal Asynchronous Receiver & Transmitter
VSWR	Voltage Standing Wave Ratio
SM	SIM phonebook
NC	Not connect
EDGE	Enhanced data rates for GSM evolution
HSDPA	High Speed Downlink Packet Access
HSUPA	High Speed Uplink Packet Access
ZIF	Zero intermediate frequency
WCDMA	Wideband Code Division Multiple Access
VCTCXO	Voltage control temperature-compensated crystal oscillator
USIM	Universal subscriber identity module
UMTS	Universal mobile telecommunications system
UART	Universal asynchronous receiver transmitter



E. Safety Caution

Table 45: Safety Caution

Marks	Requirements
♥	When in a hospital or other health care facility, observe the restrictions about the use of mobiles. Switch the cellular terminal or mobile off, medical equipment may be sensitive and not operate normally due to RF energy interference.
X	Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it is switched off. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. Forgetting to think much of these instructions may impact the flight safety, or offend local legal action, or both.
	Do not operate the cellular terminal or mobile in the presence of flammable gases or fumes. Switch off the cellular terminal when you are near petrol stations, fuel depots, chemical plants or where blasting operations are in progress. Operation of any electrical equipment in potentially explosive atmospheres can constitute a safety hazard.
	Your cellular terminal or mobile receives and transmits radio frequency energy while switched on. RF interference can occur if it is used close to TV sets, radios, computers or other electric equipment.
	Road safety comes first! Do not use a hand-held cellular terminal or mobile when driving a vehicle, unless it is securely mounted in a holder for hands free operation. Before making a call with a hand-held terminal or mobile, park the vehicle.
	GSM cellular terminals or mobiles operate over radio frequency signals and cellular networks and cannot be guaranteed to connect in all conditions, especially with a mobile fee or an invalid SIM card. While you are in this condition and need emergent help, please remember to use emergency calls. In order to make or receive calls, the
sos	cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength. Some networks do not allow for emergency call if certain network services or phone features are in use (e.g. lock functions, fixed dialing etc.). You may have to deactivate those features before you can make an emergency call. Also, some networks require that a valid SIM card be properly inserted in the cellular terminal or mobile.



Contact us:

Shanghai SIMCom Wireless Solutions Ltd.

Add: SIM Technology Building B, No.633, Jinzhong Road, Changning District, Shanghai P.R.

China 200335

Tel: +86 21 3157 5200\3157 5100

Email: simcom.com
URL: www.simcom.com